



Quick Start Guide

Thank you for purchasing the Nokia 6085 phone!

Use this guide to:

- Get familiar with your device
- Insert the SIM card and battery
- Load it up
- Play your music
- Find additional support



See the complete user guide for more information and for important safety and maintenance information. Do not use this document in place of the complete user guide. 9253128. Printed in XXX.

NOKIA
Connecting People

1. Check it out

The Nokia 6085 is stylish and has all the features you need. Discover the difference with enhanced voice features, stereo Bluetooth headset, and a groovy music player. Open the flip to reveal the keypad. Take a minute to check out the keys.

1. **Display:** 128 x 160 pixels that vividly displays up to 262,144 colours.
2. **Volume control keys** + - : Press to turn your volume up and down.
3. **Camera key** : VGA camera and video recorder.
4. **Pop Port™ connector:** Download your favourite songs from your compatible PC with a USB cable (sold separately).
5. **Left and right selection keys** (\) : Press to activate the option shown above the key.
6. **Send/Talk key** : Press to start your calls.
7. **Power/End key** : Press and hold to turn the phone on/off or press to end your calls.
8. **Internet access key** : Press and hold to access the mobile web (requires network configuration settings).
9. **Silent ringing tone key** : From the Start screen, press and hold this key to quickly silence your phone. Press and hold the same key to restore your ring tone to normal.
10. **Scroll key** : From the Start screen, use the five-way scroll key to access these shortcuts:
 - Press up to access **Gallery**
 - Press right to create a new text message
 - Press down to access **Contacts**
 - Press left to access **Call log**
11. **Hot swappable microSD memory card slot:** Use a microSD card to increase the memory of your phone (sold separately).



2. Insert the SIM card and battery

Your Nokia 6085 uses a convenient SIM card, which holds information about your wireless service and stores contact information. When you insert the SIM card, you can quickly transfer your service and contacts to your phone.

Insert the SIM card

1. With the back of the phone facing you, push down and slide the cover off in the direction shown (fig. 2.1).
2. Open the SIM card holder by pulling it up in the direction shown (fig. 2.2).
3. Slide the SIM card into the SIM card holder with the gold-coloured contact area facing up and the beveled edge pointing towards the bottom of the phone (fig. 2.3).
4. Close the SIM card holder by pressing down on it.

TIP! Save information to your SIM card so you can fully use the available memory of your Nokia 6085.

Insert and charge the battery

1. Align the gold-coloured contacts of the battery with the battery compartment contacts and press the battery into place (fig. 2.4).
2. Replace the back cover by aligning the tabs and sliding the cover until it locks into place.
3. Plug the Nokia charger into a standard AC wall outlet.
4. Connect the charger cable to the bottom of the Nokia 6085.



fig. 2.1



fig. 2.2



fig. 2.3

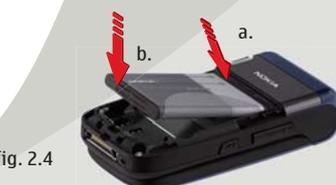


fig. 2.4

3. Getting started with your music player

1. Install the Rogers PC Media Player
Visit www.rogers.com/musicstore, download the Rogers PC Media Player, and install it on your computer.
2. Put music on your computer
To import music from your CDs into the Rogers PC Media Player
 1. Put a CD into your computer
 2. Launch the Rogers PC Media Player
 3. Select "Import" under "CD"
 4. Select/Deselect songs, choose the file type (eg. MP3), and select the "Import" button

Your Nokia 6085 is ready to rock right out of the box. Take a look at how easy it is to transfer your music from your computer to your phone. See the CD-ROM included for more info.

1. Connect your Nokia 6085 to your PC with the USB data cable.
2. Select **OK** to confirm USB connection. ()
3. Select **Data Storage*** on the Nokia 6085. ()
Your phone is now connected to your PC as a mass storage memory device ("removable disk").
4. Using Windows Explorer on your computer, find the music files you wish to transfer to your phone (usually in **My Music**) and "drag and drop" them to the folder named **Music** of the 6085.
5. Once the transfer is complete, select **Quit** from your Nokia 6085 (), and unplug the USB cable from the devices.
6. Enjoy your music!

* For Win DRM protected media, select Print and Media.

4. Play your music

The Nokia 6085 makes it easy to enjoy your favorite tunes

1. To view your music library, from the Start screen, select **Music**. ()
2. To immediately start playing your tracks, press the scroll key. ()
4. To play specific songs or a playlist, select **Options**. ()
4. Select **Library**. () ()
5. Select **Artists, Albums, New songs, Genres, or All songs**.
Tip! You can receive calls even when you are listening to your music. When your phone rings, the music automatically pauses. To restart the music after the call, just press the scroll key ().

Tune in the FM radio to your favorite local stations (compatible headset required).

1. To activate the radio, select **Menu > Media > Radio**.
2. To scroll to the desired frequency, press Scan up () or Scan Down ().
3. To adjust the volume, press the volume key.

USING HEADPHONES

While using standard headphones, use the phone's microphone to talk on the phone.

 **Tip!** Consult your user guide to learn more about these advanced features.

5. Find additional support

Nokia support options are flexible and comprehensive. Use the following resources to learn more about your new Nokia 6085.

Nokia 6085 user guide

Refer to the user guide for the most comprehensive details on how to use your new Nokia 6085.

Nokia support on the web

Check <http://www.nokia.ca/english/support/> or your local Nokia web site for the latest information.

1 888 22-NOKIA (1 888 226-6542)

Nokia provides toll-free customer support, Monday-Friday from 8:30 a.m. to 7:00 p.m. EST.

Service provider

Contact your wireless service provider for questions regarding your wireless service.

