

SIEMENS

Be inspired



C55

Issued by
Information and Communication mobile
Haidenauplatz 1
D-81667 Munich

© Siemens AG 2002
All rights reserved. Subject to availability.
Rights of modification reserved.

Siemens Aktiengesellschaft
www.my-siemens.com

Safety precautions	3	Location:	23
Overview of the phone	5	Assign animation	24
Getting Started	6	Voicedialling	25
Insert SIM card/battery	7	Groups	26
Charge battery	8	SMS to group	26
General Instructions	9	Call to group	26
User Guide	9	Group setup	28
Control key	9	Records	29
Switch on, off / PIN entry	11	Duration/charges	30
Security	12	Messages (SMS)	31
Codes	12	Read messages	31
Prevent accidental activation ..	13	Inbox/outbox	32
My phone	14	Archive	33
Making a phone call	15	Compose a message	33
Dialling with number keys	15	Predefined text	35
End call	15	SMS to group	35
Set volume	15	Picture & sound	35
Redial previous numbers	15	Surf & fun	37
When a number is busy	16	Internet (WAP)	37
Accept call	16	Games & more	40
Reject call	17	Bitmap viewer	42
Handsfree	17	Sound manager	44
Held call	17	Individual recording	44
Call waiting/Swap	18	Playback	45
Conference	19	Organiser	47
Call menu	19	Alarm clock	47
Babysitter	20	Alarms	47
Phonebook	21	Greetings	48
<New entry>	21	Notes	49
Call/search for an entry	22	Missed alarms	50
Call with Record no.	22	Voice command	50
Edit entry	22	Calculator	51

See also Index at the end of this User Guide

Currency conv.	52	Questions&Answers	89
Voice message/Mailbox	53	Customer Care	92
CB services	54	Care and maintenance	94
Profiles	55	Specifications/maintenance	95
Setup	55	Accessories	96
Car Kit	56	Basics	96
Headset	56	Data/Applications	96
Aircraft mode	56	Car Solutions	97
My menu	57	Guarantee certificate (UK)	98
Fast access key	58	Guarantee certificate (IRL)	100
Control key (on the left)	58	SAR (European Union)	102
Speed dialling keys	59	SAR (ICNIRP)	104
Setup	60	Index	105
Display	60		
Audio	61		
Keys	63		
Device	64		
Clock	66		
Connectivity	67		
Security	72		
Network	74		
Accessories	76		
Text entry with "T9"	77		
Setup	77		
Create a word using T9	77		
Display symbols (selection)	79		
Notes A-Z	80		

See also Index at the end of this User Guide

Information for parents

Please read the operating instructions and safety precautions carefully before use. Explain the content and the hazards associated with using the phone to your children.



Remember to comply with legal requirements and local restrictions when using the phone. For example in aeroplanes, petrol stations, hospitals or while driving.



The ringtone (p. 62), info tones (p. 63) and handsfree talking are reproduced through the loudspeaker. Do not hold the phone to your ear when it rings or when you have switched on the handsfree function (p. 17). Otherwise you risk serious permanent damage to your hearing.



Mobile phones can interfere with the functioning of medical devices such as hearing aids or pacemakers. Keep at least 20 cm/9 inches between phone and pacemaker. When using the mobile phone hold it to the ear which is further away from the pacemaker. For more information consult your doctor.



Do not use an optical magnifier to look at the activated infrared interface [Class 1 LED product (classification as per IEC 60825-1)].



The SIM card may be removed. Caution! Small parts like this could be swallowed by young children.



Only use original Siemens batteries (100 % mercury-free) and – charging devices. Otherwise you risk serious damage to health and property. The battery could explode, for instance.



The mains voltage specified on the power supply unit (V) must not be exceeded. Otherwise the charging device may be destroyed.



You may only open the phone to replace the battery (100 % mercury-free) or SIM card. You must not open the battery under any circumstances. All other changes to this device are strictly prohibited and will invalidate the guarantee.

Emergency number(SOS)

By pressing the control key **SOS**, you can make an emergency call on any network without a SIM card and without entering a PIN (not available in all countries).

This must only be used in real emergencies!

Important:

Please dispose of unwanted batteries and phones as permitted by the laws in your country.



The phone may cause interference in the vicinity of TV sets, radios and PCs.



Use only Siemens original accessories. This will avoid potential risks to health or property and ensure compliance with all relevant regulations.

Improper use will invalidate the guarantee!

Loudspeaker

Display indicators

Signal strength/
GPRS available/
battery level.

Call key

Dial displayed phone
number or name, accept
calls.
In standby mode:
Display the last calls.

Hold down

In standby mode:
Switch signal tones on and
off (see also p. 86).

Microphone

On the underside.

Device interface

Connection for charger,
headset etc.

Control key at the top/at the bottom

Press at the bottom: Open
Phonebook (in standby mode).
Hold down at the top: Start
voice dialling (in standby
mode).

Press at the top: Start volume
adjustment (during a call). Then
press at the top/at the bottom to
make your setting.
Scroll up and down in menus
and lists.

Integrated antenna



Do not interfere with the
phone above the battery
cover unnecessarily. This
reduces the signal strength.

On/Off/End key


Press briefly:
End call/function or return
to standby mode. In menus:
one menu level back.

Hold down:
Switch phone on/off.

From menus: Return to the
standby mode.

Hold down


In standby mode: Switch
key lock on and off.

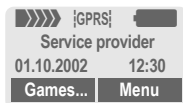

Control key on the left/on the right

Press the control key on the outside
left or **right**, to call up the function
that is displayed as text or icon on the
grey fields above the key. These are
in standby mode (factory default):


Games... or e.g.

 (SIM services) and

Menu (main menu).

The front and back covers of the casing (CLIPit™ Covers, my-CLIPit™: p. 14 and p. 96) as well as the keypad can be changed in a matter of seconds - no tools required. Please switch the phone off first:

To attach

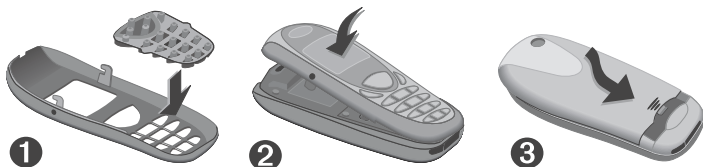

To remove



Note

Your phone's display and the display cover of the top shell are delivered with a protective film. **Remove this film before getting started.**


In rare cases the static discharge may cause discolouration at the edges of the display. However this will disappear within 10 minutes.

To avoid damaging the display the phone should not be used without the upper shell. Switch off the phone before changing the upper shell.


Insert SIM card/battery

The service provider supplies you with a SIM card on which all the important data for your line is stored. If the SIM card has been delivered in credit card size, snap the smaller segment out and remove any rough edges.


- Press grooved area ❶, then lift cover in the direction indicated by the arrow ❷.

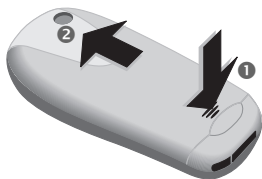


- Press latch in the direction indicated by the arrow ❸, lift battery at the cutout on the side of the phone, then tilt upwards and remove ❹.

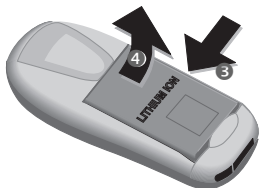

- Insert SIM card in the opening, contacts pointing downwards (make sure the angled corner is in correct position ❺). Push gently until it engages ❻.

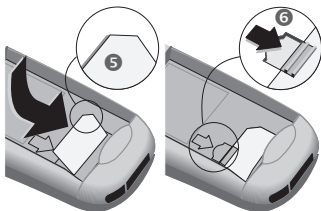

- Insert battery in the phone sideways ❷, then press downwards until it engages ❸.

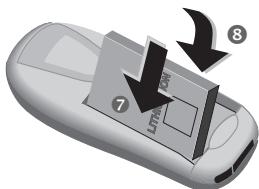

- Replace cover and press downwards until it engages.

Note


Always switch off phone before removing the battery!

Only 3-Volt SIM cards are supported. Please contact your service provider if you have an older card.

Functions without SIM card p. 88

Charge battery

The battery is not fully charged when delivered. Plug in the charger cable at the bottom of the phone, plug in the power supply unit to the mains power socket and charge for least two hours.

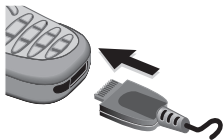

Display when charging is in progress

Charging time

An empty battery is fully charged after about 2 hours. Charging is only possible in an ambient temperature of 5°C to 40°C (the charge icon flashes as a warning when the temperature is 5°C above/below this range). The voltage specified on the power supply unit must not be exceeded.

To use the full performance of the battery, the battery must be fully charged and discharged at least five times.

Charge icon not visible

If the battery is totally discharged no charge icon is displayed when the charger is plugged in. It is displayed after 2 hours at most. In this case the battery is fully charged after 3-4 hours.

Only use the charger provided!

Display while in service

Charge level display during operation (empty-full):



A beep sounds when the battery is nearly empty. The charge level of the battery is displayed correctly only after uninterrupted charging/discharging. You should not remove the battery unnecessarily and not end charging prematurely, if possible.

Note

The charger heats up when used for long periods. This is normal and not dangerous.

Operating times p. 83

Quality declaration for the battery..... p. 84

User Guide

The following symbols are used to explain operation:



Enter numbers or letters.



On/Off/End key.



Call key.



Press control key **at the top/ at the bottom** to scroll up and down.



Press control key **on the left/on the right** to call a function.



Displays a function.



Function depends on the service provider, special registration may be necessary.


Control key

Steps for calling a function are shown in a **condensed form** in this user guide, e.g.: to display the call list for missed calls:

Menu → Records → Missed calls

This corresponds to:

1

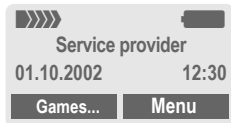


Menu

Open menu.

From standby mode: Press control key **on the right**.


2

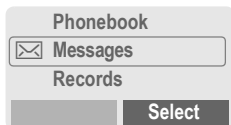

Scroll to Records.

Press control key **at the bottom** to scroll downwards.

3

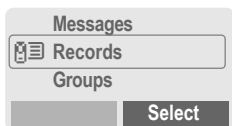


Select

Press.

Press control key **on the right** to open the **Records** submenu.

4

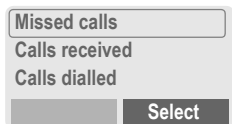


Select

Press.

Press control key **on the right** to open the list of **Missed calls**.


5

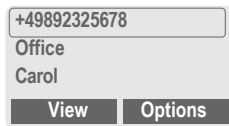

Scroll to the required entry.

Press control key **at the bottom** to scroll downwards.

6

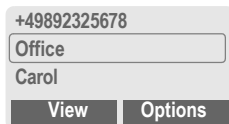


View

Press.

Press control key **on the left** to display the phone number with date and time.

7

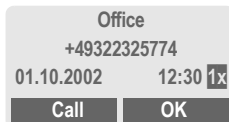

Switch on/off



Hold **down** On/Off/End key to switch on or off.

Enter PIN

The SIM card can be protected with a 4-8 digit PIN.



Enter the PIN code using the number keys (the display shows a series of asterisks, if you make a mistake press **Clear**).




OK

Press the control key **on the right** to confirm the input.

Logging on to the network will take a few seconds.

Standby mode

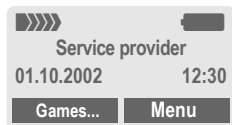

When the name of the service provider/logo appears on the display, the phone is **in standby mode** and **ready for use**.

Note

Signal strength	p. 84
SIM services (optional).....	p. 85
Games.....	p. 40
SOS	p. 80
Change PIN.....	p. 12
SIM card problems	p. 85
Clear SIM card barring	p. 13
Other network.....	p. 74
Deactivate/activate screensaver	p. 60
Set display contrast.....	p. 61
Set time	p. 66

The phone and SIM card are protected against misuse by several security codes.

Keep these confidential numbers in a safe place where you can access them again if required.

PIN	Protects your SIM card (personal identification number).
PIN2	This is needed to set the charge detail display and to access additional functions on special SIM cards.
PUK PUK2	Key code. Used to unlock SIM cards after the wrong PIN has been entered.
Phone code	Protects some functions of your phone. Must be defined at the first security setting.

Menu → **Setup** → **Security**
→ then select function

Codes

PIN control

The PIN is usually requested each time the phone is switched on. You can deactivate this feature but you risk unauthorised use of the phone. Some service providers do not permit deactivation of the control.

Select

Press.



Enter PIN.

OK

Confirm input.

Change

Press.

OK

Confirm.

Change PIN

You can change the PIN to any 4-8 digit number you may find easier to remember.



Enter **old** PIN.

OK

Press.



OK Enter **new** PIN.



OK Repeat **new** PIN.

Change PIN 2

(displayed only if PIN 2 is available).
Proceed as with **Change PIN**.

ChangePhonecode

You define and enter the phone code (4 - 8 digits) when calling a phone code protected function (e.g. babysitter, p. 20) for the first time. It is then valid for all protected functions.

If it is entered incorrectly three times the phone is locked. Contact the Siemens Service (p. 92).

Clear SIM card barring

If the PIN is entered incorrectly three times, the SIM card is barred. Enter the PUK (MASTER PIN) provided by your service provider with the SIM card, according to instructions. If the PUK (MASTER PIN) has been lost, please contact your service provider.

Note

Screensaver.....	p. 60
Auto key lock.....	p. 63
Further security settings.....	p. 72

Prevent accidental activation

Even if PIN use is deactivated (p. 12) confirmation is required to switch on the phone.

This prevents accidental activation of the phone, e.g. when you are carrying it in a bag or when you are travelling in an aircraft.



Hold **down**.

Please confirm switch on

OK

Cancel

OK

Press to switch on the phone.

Cancel

Press (or no further input) to stop switch-on procedure. The phone does not switch on.

Your phone offers a number of functions so that you can adapt it to meet your personal requirements.

Ring tones

Assign individual ring tones to caller groups or anniversaries (p. 62).

The sound manager is available for managing the ring tones (p. 44).

Logo, Screensaver, Animation

Adjust your phone according to your own wishes in the following ways to give it a personal touch:

To switch on

Select a bitmap style and a greeting (p. 60) that you create yourself.

Screensaver

You can set an analogue clock, an individual picture or an animation as screensaver (p. 60).

(Provider) logo

Select an individual picture to replace the network provider's logo/name (p. 60).

Where do I get what?

You can order additional ring tones, logos and screensavers on the Internet and receive them via SMS:

www.my-siemens.com/ringtones

www.my-siemens.com/logos

www.my-siemens.com/screensaver

Or you can download them directly via WAP:

wap.my-siemens.com

Siemens City Portal

Further services for your mobile phone such as a Photo Logo Composer to create personal pictures for your Phonebook can be found at page 24:

www.my-siemens.com/city

The Siemens City Portal also offers a list of countries in which these services are available.

CLIPit™ Covers

Select different colours for the top and bottom covers from the Siemens City Portal. Or use a personal photo to make your phone unique:

www.my-siemens.com/my-clipit

My menu

Create your own menu with frequently used functions, phone numbers or WAP pages (p. 57).

Dialling with number keys

The phone must be switched on (standby mode).



Enter the number (always with prefix, if necessary with the international dialling code).

Clear A **short** press clears the last digit, a **long** press clears the entire number.



Press the Call key. The phone number displayed is dialled.

End call



Press the End key **briefly**. The call is ended. Press this key even if the person on the other end of the line has hung up first.

Set volume



You can activate adjustment of the handset volume with the control key (at the top), but only during a call.



Set volume.

If a Car kit is used, its volume setting does not affect the usual setting on the phone.

Redial previous numbers

To redial the phone number **last** called:



Press the Call key **twice**.

To redial other numbers that were dialled previously:



Press the Call key once.



Pick out the required phone number from the list, then press...



... to dial.

Note

Store number	p. 21
Options Call lists	p. 29
Hold Swap/conference	p. 18
menu Call menu	p. 19
Divert Divert set	p. 64
Handsfr. Handsfree	p. 17
Voice dialling	p. 25
International dialling codes	p. 82
Auto key lock	p. 63
Phone number memo	p. 84
Microphone off	p. 19
Phone number transmission off/on (Hide ID)	p. 64
Control codes (DTMF)	p. 80

When a number is busy

If the called number is busy or cannot be reached because of network problems several options are available (depending on the service provider). An incoming call or any other use of the phone interrupts these functions.

Either

Auto redial previous numbers

Auto dial Press. The number is automatically dialed for up to 15 minutes at increasing intervals. End with:



End key.

Or

Call back




Call back Press. Your phone rings when the busy number is free. Press the Call key to dial the number.

Or

Reminder

Prompt Press. A beep reminds you to redial the displayed phone number after 15 minutes.

Accept call

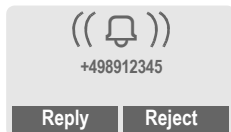

The phone must be switched on (standby mode). An incoming call will interrupt any other use of the phone.

Reply Press.

Or



Press.

If the phone number has been transmitted by the network, it is displayed. If the number and the name are stored in the Phonebook, the corresponding name is displayed instead. If set, a picture or an animation can be displayed instead of the bell icon (p. 24).

Note

Please make sure that you have accepted the call before putting the telephone to your ear. This will avoid damage to your hearing caused by a loud ring tone.

Reject call

Reject Press.

Or



Press **briefly**.

Note

 Missed calls..... p. 29

Accept call using any key p. 63

Handsfree

You can put the phone aside during a call. You can then hear the caller via the loudspeaker.



Handsfr. Activate handsfree function.

Yes Activate.




Control volume.

Handsfr. Deactivate.

Note

It is essential to switch off "Handsfree" before putting the telephone directly to your ear to avoid damage to hearing!


 **menu** Call menu p. 19


Held call

You can call another number during a call.

 **menu** Open call menu.

Hold The current call is put on hold.

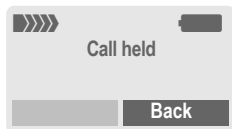

Now dial the new phone number (also from Phonebook: .

When the new connection is established:

 **menu** Open call menu

Swap Swap back and forth between both calls.

Call waiting/Swap



You may need to register for this function with the service provider and set your phone accordingly (p. 64).

During a call, you may be advised that there is another call waiting. You will hear a special tone during the call. You have the following options:

Accept the waiting call

Swap

Accept the waiting call and place the current call on hold. To swap between the two calls, proceed as above.

End the current call:



Yes

Return to the held call.

Or

No

The held call is ended.

Reject waiting call

Reject

Reject the waiting call. The caller hears the busy tone.

Or

Divert

If this is set, the waiting call will be diverted to the mailbox for example (setting, p. 64).

End current call



Reply

End the current call.

Accept the new call.

Conference



Call up to 5 parties one by one and link them together in a phone conference. Some of the functions described may not be supported by your service provider or may have to be enabled specially.

You have established a connection:



Open menu and select **Hold**. The current call is put on hold. Now dial a new number. When the new connection is established ...



... open menu and select **Conference**. The held call is joined.

Repeat procedure until all participants are linked together (up to 5 participants).

End



All calls in the conference are ended simultaneously when the End key is pressed.

Call menu

The following functions are only available during a call:



Open menu.

Swap


(p. 18)

Hold

(p. 18)

Microphone

Switch microphone on/off. If switched off, the person on the other end of the line cannot hear you (muting).

Alternatively:  Hold down.

Handsfree

(p. 17)

Volume

Adjust handset volume.

Conference

(p. 19)

Duration/charges

While the connection continues, the call duration and (if set, p. 30) the charge details are displayed.

Send DTMF tones

(p. 80)

Call transfer



The original call is joined to the second one. For you, both calls are now ended.

Main menu

Access to the main menu.

Call status

List all held and active calls (e.g. participants in a conference).

Babysitter

Only **one** phone number can be dialled.



Hold **down** control key on the right.

Switch on

Menu → Setup → Security
→ Babysitter

Select Press.



Enter phone code:

When first prompted you define and enter the phone code (4 - 8 digits).

Please do not forget this code!

OK Confirm input.

Change Press.



Select phone number from the Phonebook (p. 21) or enter a new one.

OK Confirm On.

Switch off



Hold **down**.



Enter phone code.

OK Confirm input.

Change Press.

OK Confirm Off.

Note


Change phone code..... p. 13

Enter frequently used phone numbers in the Phonebook with a special name. To dial them, simply highlight the name. If a phone number is stored with a name, it appears on the display when you are called. Entries that belong together can be combined to form a **group**.

<New entry>



Open Phonebook (in standby mode).

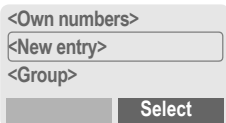

Select <New entry>.



Activate input fields.



Make the following entries. The maximum number of characters available is shown at the top of the display.

Number:

Enter phone number always with prefix.

Name:

Enter (Text entry, p. 22).

Group:

Default: **No group**

Change Entries can be organised by groups (p. 26) for example:

VIP, Leisure, Office, Family

Location:

Default: **SIM**

Change Select a storage location: **SIM**, **Protected SIM** or **Mobile** (p. 23).

Record no.:

Each entry is automatically assigned a number under which it can also be selected (p. 22).

Change Press to change the entry number.

Save Press to store the new entry.

Note

<Group>	p. 28
<Own numbers>	p. 83
+List International dialling code	p. 82
Assign animation	p. 24
Voice dialling	p. 25
Service numbers	p. 84
Store control codes	p. 80

Text entry

Press number key repeatedly until the required letter is displayed. The cursor advances after a short delay.



Press once for **a**, twice for **b** etc. The first letter of a name is automatically written in UPPER CASE.

Hold down: Writes the digit.



Umlauts and numbers are displayed after the relevant letters.



Press briefly to delete the letter before the cursor.

Hold down to delete the whole name.



Move the cursor (forward/back).



Press briefly: Switch between: **abc**, **Abc**, **T9abc**, **T9Abc**, **123**. Status indicator in the top line of the display.

Hold down: All input modes are displayed.



Press briefly: Select special characters (p. 81).

Hold down: Open input menu (p. 82).



Press once/repeatedly:

., ? ! @ / & ~ + - :

Hold down: Write 0



Space. Only with T9: Press twice = skip line.

Call/search for an entry



Open Phonebook.



Select a name with the first letter and/or scroll.



Dial number.

Call with Record no.

A record number is automatically assigned to every new entry in the Phonebook.



Enter record number (in standby mode).



Press.



Press.

Edit entry



Select entry in the Phonebook.



Press and select **Change**.



Select required input field.



Make your changes.



Press.

Phonebook menu

Options	Open menu.
View	Display entry.
Change	Display entry for changes.
New entry	Create a new Phonebook entry.
Delete	Delete entry from the Phonebook.
Delete all	Select storage location. Delete all entries after confirmation.
Voicedialling	Use voice dialling to make an entry (p. 25).
Send SMS...	as entry: Send Phonebook entry as vCard to recipient. as text: Send entry as text of an SMS message.
Animation	Assign an individual animation to the phone number (p. 24).
Capacity	Display the maximum memory and the available capacity for SIM, Protected SIM, phone memory, animations and voice dialling.

Location:

An entry can be moved to different storage locations in the Phonebook (change entry, p. 22).

SIM (standard)

Entries that are stored in the Phonebook on the SIM card can also be used on a different GSM Phone.

Protected SIM



Phone numbers can be stored in protected locations on a special SIM card. A PIN 2 is needed for editing (p. 12).

Mobile

Phonebook entries are stored in the memory of the mobile phone when the memory of the SIM card is full.

Symbols in the opened entry



Storage location (p. 23)



Picture (p. 24)



Groups (p. 26)



Voice dialling (p. 25)

Assign animation

Assign an individual animation to phone numbers. This animation will appear in the display when there is a call from this number.

Assign animation



Open Phonebook.



Select entry.

Options

Open menu.

Select

Select Animation.
Select Own animat. or
Own pictures.



Select Animation.

Load

The preview p. 42 is opened and the animation is displayed.

Select

The animation is assigned to the phone number. It appears with a symbol in the Phonebook.

Delete/change animation

If an animation is assigned to a phone number, it can be deleted or replaced.



Select entry with animation in the Phonebook.

Options

Press.

Select

Select Animation.

Delete

The assignment is cleared after confirmation.

Or

Select

The current animation is displayed.

Note

Animations can simply be pictures.

An animation can be assigned to several phone numbers.

Add pictures/animationsp. 43

Siemens City Portalp. 14

Voicedialling

You can dial phone numbers by simply saying a name.

Up to 20 voice recordings for voice dialling or voice commands (p. 50) can be stored in the phone (not on the SIM card!).

Record recording



Open Phonebook.



Select entry.

Options

Open menu.

Voicedialling

Select and confirm with **Yes**.

Start

Start the recording.

A short signal sounds. Now say the name and **repeat** it when prompted by a signal tone and a display prompt. A beep confirms the recording that is saved automatically.



Identification of entries with voice dialling in the Phonebook.

Apply voice dialling



Hold **down**. Start voice dialling (in standby mode).

Now say the name, the phone number is dialled.

Note

Noisy environments may affect the recognisability.

Delete/redo recording

You can delete or redo the voice recording for a Phonebook entry.



Open Phonebook.



Select entry with voice dialling.

Options

Open menu.



Select  **Voicedialling**.

Delete

Press. Delete voice recording with **Yes**. The Phonebook entry itself is not affected.

Or

Select

You can play back the recording or redo it.

If there are many Phonebook entries it is best to assign them to a group, e.g.: **VIP, Leisure, Office, Family**

Menu → **Groups** → Select function:

SMS to group

A memo (SMS) can be sent as a "circular" to all members of a group. Each SMS is charged separately!



Select a group (the number of the entries is listed behind the group name).



Select

Press. The group is confirmed and the editor is opened.



Compose message.



Press. The first recipient is displayed.



Press. The SMS is sent.

Each send operation must be confirmed. It is possible to skip individual recipients.

Call to group



You can call up to 5 group members one by one and link them together in a conference (function may need to be enabled by the service provider).



Select a group.

Select


Press. The members of the group are listed.



Select the entries you want to call.

Change

Press. Mark entry/unmark entry.

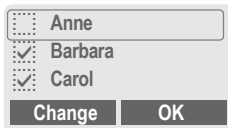

OK


Confirm selection. The first entry is dialled. When the connection has been established, the call is put on hold.



Proceed by calling the next entry until all marked entries are called (up to 5, depending on the service provider).

Options

Open menu e.g. to link the calls on hold in a conference.

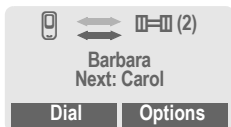**Call to group menu**

Options Open menu.

Dial	Dial current entry.
Skip	Skip next number.
Conference	Link all calls on hold in a conference (p. 19).
Swap	Accept the waiting call and put the current call on hold (p. 18).
Hold	Put call on hold to call another entry.

Microphone Switch the microphone on/off. When this is switched off the person on the other end of the line cannot hear you (muting).

Alternatively:

Press **down**.

Handsfree Call via the loudspeaker.

Volume Adjust handset volume.

Duration/charges While the connection continues, the call duration and (if set, p. 30) the call time/cost are displayed.

Send DTMF tones (p. 80)




Call transfer The original call is joined to the second one. For you, both calls are now ended.

Main menu Direct access to the main menu.

Call status List all held and active calls (e.g., participants in a conference).

Group setup

Menu → Groups → Group setup

	VIP	(6)
	Leisure	(9)
	Office	(12)
Rename		Select



Select a group.

Rename Change group name.

Select Display members of the group.

<New entry>	
Barbara	
Carol	
View	Options

<New entry>
Make your entries as in Phonebook (p. 21).

View Display entry.

Options See below.

Group entry menu

Options Open menu.

View	Display entry.
Change	Open entry for changes.
New entry	Enter new member.
Remove	Remove entry only from the group. It is still available in the Phonebook.
Remove all	Remove all entries from the group.
Voicedialling	Start voice dialling to an entry (p. 25).
Send SMS...	as entry: Send Phonebook entry to recipient. as text: Send entry as text of an SMS message.
Animation	Assign an individual animation to the phone number (p. 24).

Your phone stores the phone numbers of calls for convenient redialling.

Menu → **Records**

Select Press.



Choose call list.

Select Press.



Select phone number.



Dial phone number.

Or

View Display information on the phone number.

The following call lists are available:

Missed calls



The phone numbers of calls that you have received but not answered are stored for call back purposes.



Icon in standby mode for missed call. When you press the control key (on the left), the phone number is displayed.

Requirement: The network supports the "Caller Identity" feature.

Calls received



All accepted calls are listed. Requirement:

The network supports the "Caller Identity" feature.

Calls dialled

Access to the last ten numbers you dialled.



Fast access in standby mode.


Erase records

The contents of all call lists are deleted.

Call list menu

The call list menu can be called up if an entry is highlighted.

Options Open call list menu.

View	View entry.
Correct no.	Load number into display and correct it there if necessary.
Save no. to 	Store entry in the Phonebook.
Delete	Delete entry after confirmation.
Delete all	Delete all entries of the call list after confirmation.

Note

Duration/chargesp. 30

You can display the charge details and the duration of calls as you speak as well as setting a unit limit for outgoing calls.

Menu → Records → Duration/charges

After you have made the charge detail settings, you can display the call duration/charges for the various call types or you can display the credit balance.

Select a function:

Last call

All outgoing calls

All incom. calls

Remain. units

Charge settings

Select Display the data.

When displayed, you can:

Reset Reset display.

OK End display.

Charge settings

Menu → Records → Duration/charges
→ Charge settings

Conv.



(PIN 2 query)

Enter the currency in which the charge details are to be shown.

Personal rate



(PIN 2 query)

Enter the charges per unit/period.

A/c limit



(PIN 2 query)

Special SIM cards allow you or the service provider to define a credit or period after which the phone is barred for outgoing calls.

Change Press, enter PIN 2.

A/c limit

Activate.



Enter the number of the units and ...

OK

confirm.

Then confirm the credit or reset the counter. The display of the credit balance of Prepaid cards may vary depending on the service provider.

Auto display

Call duration and charges of the last call are automatically displayed after each call.


You may transmit and receive very long messages (up to 760 characters) on your phone, which are automatically composed from several "normal" SMS messages (note the accruing charges).

Depending on the service provider, e-mails and faxes can also be sent or e-mails can be received via SMS (change setting if necessary, p. 70).


Read messages



Display indicates a new message.

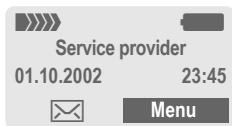

Press the control key on the left to read the message.

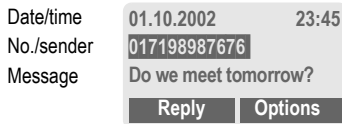

Scroll through the message line by line.

Reply Reply menu (p. 32).

Options Inbox/outbox menu (p. 32).

At the end of the message:

Delete Delete selected message.


Next Read nextmessage.

Pictures and sounds in SMS

Pictures or **sounds** can be part of messages you receive.

Pictures are shown in the message, sounds are indicated as notes. If a note is reached when scrolling through the message, the corresponding sound is played (to send pictures and sounds see p. 35).

Note

 Message store fullp. 83
Use **highlighted** phone no./URLp. 84

Reply menu

Reply Open the reply menu.




Write message	Create a new reply text.
Change	Edit message received or assign a new text to it.
Answer is YES	Add YES to the message.
Answer is NO	Add NO to the message.
Call back	Append a standard text to the message as a reply.
Delay	
Thanks	

When the message has been edited in the editor, it can be stored or sent with **Options**.



Inbox/outbox

Menu → Messages
→ Inbox / or Outbox /

The list of saved messages is shown.

	Barbara
	Carol
	023598765432
<div>View Options</div>	

Options See below.


Symbol	Inbox /	Outbox /
	Read	Not sent
	Unread	Sent

Inbox/outbox menu

Different functions are available depending on the context:

Options Open menu.

View	Read entry.
Reply	Directly answer incoming SMS messages.
Send	Dial number or select from the Phonebook, then send.
Change	Open editor for changes.
Delete	Delete selected message.
Delete all	Delete all entries after confirmation.

Picture & sound (p. 35)	List pictures and sounds included in the message.
Capacity	Display of the maximum and available memory space, plus the number of segments that make up the message.
Status report 	(Outbox list only) Request delivery confirmation for messages sent.
Mark as unread	Mark the message as unread.
Save no. to 	Copy a selected phone number to the Phonebook.
Move to archive	Move message to the archive.
Send with...	Change SMS profile before sending (p. 70).

Archive

Menu → Messages → Archive

The list of the messages recorded in the archive is shown. Different functions are available depending on the context.

Archive menu

Options Open menu.

View	Read entry.
Mark	Highlight text to be edited.
Clear	Clear selected message.
Delete all	Delete all saved messages after confirmation.
Rename	Rename the entry.
Sort	Set sort criteria (alphabetical, time).
Attributes	Display name, size and date.
Capacity	Display maximum and available capacity for SMS archive, special graphics etc.

Compose a message

Menu → Messages → New SMS



Text input using "T9" (p. 77) allows you to quickly create long SMS messages using just a few key entries.

Delete Press **briefly** to delete letter by letter, hold **down** to delete the entire word.



Press.



Enter number or select from the Phonebook.

OK

Confirm. The message is sent to the service centre for transmission.

OK

Return to the message.

Options

Open menu and select **Save** to store the message.

Display in the uppermost line:

Abc SMS 1 739
We start at 8 a.m.

Abc

Example for T9 active.

abc/Abc/
T9abc/
T9Abc/123

Lowercase/uppercase letters and digits.

SMS

Display title.

1

Number of the required SMS messages.

739

Number of characters still available.

Note

Insert pictures&sounds into text	p. 35
If Message type , Validity period , Service centre are requested	p. 70
Transmit ring tones	p. 44
Send pictures	p. 43
T9 information	p. 77
Enter special characters	p. 81
SMS status report	p. 85

Text menu

Options

Open the text menu.

Send	Dial the number or select from Phonebook, then send.
Save	Save SMS in the outbox list.
Picture & sound	Add pictures and sounds to SMS (p. 35)
Format	Line feed Small font, Medium font, Large font Underline Left, Right, Center (align) Mark text (highlight text with the scroll key)
Clear text	Delete the whole text.
Insert text	Insert predefined text fragment.
Insert from 	Open Phonebook and copy phone number into the message.
Insert URL	Insert URL from the WAP bookmarks in the text.
Text input	T9 preferred: Activate/deactivate T9 input (p. 77). Input language: Select the language in which the message is to be composed (p. 77).
Send with...	Change SMS profile before sending (p. 70).

Predefined text

Standard text fragments which can be added to messages are stored in the phone. You can also create five additional text fragments yourself.

Write text fragments

Menu → Messages → Predefined text



Select <New entry>.



Write text fragment.

Save

Press.

Use text fragments



Compose message.

Options

Open the text menu.



Select **Insert text**.



Select text fragment from the list.

Select

Confirm. The text fragment is inserted in the message at the cursor position.

SMS to group

You can send messages (SMS messages) as "circulars" to all members of a group (p. 26).

Picture & sound

Insert pictures and sounds in the message (EMS, p. 81).



Compose the message.

Options

Open the text menu at the end of a word.



Select **Picture & sound**.

The Pictures&Sound menu opens:

Fix animations
Fix sounds
Own animations
Own pictures
Own sounds



Select range.

Select

Confirm.

The first entry of the selected range is displayed.



Scroll in the list to the required entry.

Select

The picture/the animation is inserted in the message. Sounds are indicated by a wildcard.

Load To select from **Own pictures** / **Own animations**, you must open the preview first.

Note

Playback only occurs on phones that support this function.

In input mode a wildcard is shown instead of the sound.

Sending simultaneous multiple ring tones is not possible.

Bitmap viewer p. 42.

Activate SMS profile

You can change the current profile (change settings, p. 70).

Menu → Messages → SMS profiles



Select a profile.

Select Press to activate. The current profile is selected.

Irrespective of this setting, you may always decide before sending an SMS which profile you want to use (see text menu **Options** → Send with..., p. 34).

Internet (WAP)

Get the latest WAP information from the Internet that is specifically adapted to the display options of your phone. In addition, you can download games and applications to your phone via WAP. Internet access may require registration with the service provider.


Internet access



Menu → Surf & fun → Internet

The browser is activated as soon as you call up the function. If necessary, set how the Internet access should be made (see in the browser menu **Setup** → **Start with...**, p. 38).

The start menu appears, for example:

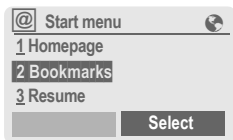

Select required function.

Select

Confirm.

You can now surf the Internet. For further instructions see p. 87.

Start menu

Homepage	The connection to the Internet provider's portal is established (may be set/preset by the service provider).
Bookmarks	List of a max. of 12 URLs stored in the phone for rapid access.
Resume	Call up recently visited pages that are still in the memory.
Profiles	Set up to 5 access profiles (p. 68).
Inbox	Inbox for messages from the WAP server.
Exit browser	Close the browser and clear down the connection.

End connection



Hold **down** to end the connection.

Browser menu

If the browser is active, the menu can be activated as follows:



Press

or



confirm.

Homepage	The first WAP Internet page that is displayed after connection is established (may have been set/preset by the service provider).
Bookmarks	List of a max. of 12 URLs stored in the phone for rapid access.
Resume	Call up recently visited pages that are still in the memory.
Go to URL	Enter URL for directly accessing an Internet address, e.g. wap.my-siemens.com
Show URL	Show the Internet address of the current page.
Reload	The page is reloaded.
Disconnect	End connection.
More ...	See below.
Exit browser	Close the browser and clear down the connection.

More ...

Profiles	Set up to 5 access profiles (p. 68).
Reset	Clear the last pages visited (cache) and reload the start page.
Setup	Font size Protocol parameters <ul style="list-style-type: none"> • Push • Push can force online • Timeout for unanswered network requests • GPRS linger time Security <ul style="list-style-type: none"> • Connection prompt • Secure prompt • Current certificate • CA certificates • Private Key PINs • Encryption Start with... <ul style="list-style-type: none"> • Start menu • Browser menu • Homepage • Resume • Bookmarks
Inbox	Inbox for messages from the WAP server.
About Openwave	Display the browser version.

Note

Homepage: The control key (left/right) may be assigned functions that are controlled online from the homepage of your service provider such as "link" or "menu". The contents of the option menus are also variable.

Displays:

@	Browser menu
⊕	Offline
⊕↔	Online
⊕↔ GP RS	GPRS Online
⊖	No network

Enter special characters:

0 +	Press repeatedly for: . , ? ! ' " 0 - () @ / : _ + ~ &
-----	--

WAP profiles

Preparation of the phone for Internet access depends on the service provider currently used:

- If the settings have already been made by your service provider you may begin immediately.
- If access profiles have been assigned by your service provider select a profile and activate it.
- The access profile must be set manually (p. 68).

WAP profiles may be barred from manual setting by your service provider. If necessary, check with your service provider for details.

Activate WAP profiles

You can change the current profile each time before accessing the Internet.

Menu → Setup
→ Connectivity
→ WAP profiles



Select a profile.

Select

Press to activate. The current profile is selected.

Your Internet browser is licensed by:



OPENWAVE™



Games & more

Download games and other applications via WAP/HTTP (p. 86, p. 82). You are advised about relevant applications on the Internet.

Downloading can start after a game/application has been selected. You can now use the application/play the game.

Most applications include instructions.

Note

Java™ information	p. 83
The ISP access for HTTP must be configured to download applications	p. 69
Activate an HTTP profile	p. 42
Activate a WAP profile	p. 39
Sounds (ring tone) /	
Silent alert on/off	p. 61

Applications and games can be found at:

wap.my-siemens.com


or on the Internet at:

www.my-siemens.com/city

Games and applications

Applications and links that are already stored in the phone are found under:

Menu → **Surf & fun** → **Games & more**

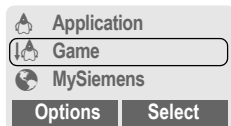

Different functions are available depending on which entry is highlighted:

Carry out game/application offline

Select

Executable application can be started immediately.

Load game/application online

Select


README only (p. 82); Application still has to be downloaded.

Go to a link (optional)

Internet


The selected Internet page is loaded.

Receive information

If information which is required, say, by an application that has already been installed, is received via **SMS** the  symbol appears in the display. By pressing the control key (on the left), the relevant application is started and the information is processed.

Note

The following key control is used for many games (virtual joystick):

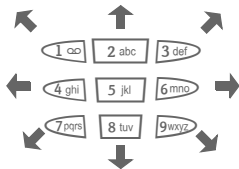

Games & More menu

All functions required for managing your files are found in this Options menu:

Options Open menu.

Delete	Delete selected application.
Rename	Rename selected applications.
HTTP profiles	Select access profile or change its settings (p. 69).
Details	Show details of the application (name, version, size, path, producer, date).
Sort	Set sort criteria (alphabetical, time).

More info	Download further instructions via Internet (WAP), if available.
Reinstall	Reinstall an application (update).
Capacity	Display available capacity (in kByte) for sound manager, bitmap viewer, Games & More and SMS archive.

HTTP profiles

Preparation of the phone depends on the service provider currently used:

- If the settings have already been made by your service provider you may begin immediately.
- If access profiles have been assigned by your service provider select a profile and activate it.
- The access profile must be set manually (p. 69).

If necessary, check with your service provider for details.

Activate HTTP profile

Menu → Setup
→ Connectivity
→ HTTP profiles



Select a profile.

Select Press to activate.

WAP can be used to download applications from the Internet. Downloading or running applications will not affect or change the software already installed on your Java™-enabled mobile phone. Siemens excludes all warranty and liability claims in respect of or in connection with any applications subsequently installed by the customer and any software not included in the original delivery package. The same applies to functions enabled subsequently at the customer's instigation. The purchaser bears sole risk for the loss of, damage to, and any defects arising in this device or the applications or software and for any direct damage or consequential damage of whatever nature resulting from the use of these applications or software. For technical reasons, such applications or software and subsequent enabling of certain functions are lost in the event of the device being replaced/re-supplied and may be lost if it is repaired. In these cases the purchaser will need to download the application again or re-enable it. Siemens does not warranty or guarantee or accept any liability for the customer's ability to download or enable applications again or to do so free of charge.

Bitmap viewer

Set animations, logos and screensaver as required in your phone.

Start bitmap viewer

You will find animations/pictures and links stored in the phone under:

Menu → Surf & fun → Bitmap viewer



Select storage location or link:

Own animations

Own pictures

URL

Different functions are available depending on which entry is highlighted:

Own animations/Own pictures



Select folder.

Select

Press.



Select animation/picture.

Download

The animation/picture is displayed.

URL (optional)

Go to the link and surf online


Internet


The selected Internet page is loaded.

Screensaver/Logo

See picture menu **Options** p. 43.

Receive pictures

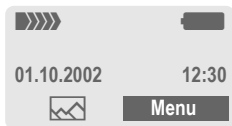

If a picture (graphic/screensaver) has been received via **SMS** the  symbol appears in the display. By pressing the control key (on the left), the bitmap viewer is started and the picture is displayed.

When downloading via **WAP**, the bitmap viewer opens automatically. For Internet addresses see p. 14.

Note

Pictures in the content of an SMS p. 31

Bitmapviewer menu

Options Open menu.


Load	Load new picture to the bitmap viewer.
Mark	Select the pictures/animations to be deleted.
Delete	Delete selected/highlighted picture(s)/animation(s).
Delete all	Delete all pictures/animations.
Rename	Rename picture/animation.

Sort	Set sort criteria.
Attributes	Display name and size in kByte.
Capacity	Display available capacity (in kByte) for sound manager, bitmap viewer, Games & More and SMS archive.

Send pictures via SMS

Open bitmap viewer and activate the required picture then:

Options Open menu.

Send Enter recipient or use Phonebook .

OK Confirm.

Picture menu

Options Open menu.

Send	Send picture via SMS.
Load	Load new picture to the bitmap viewer.
Discard	Delete current graphic from the buffer.
Delete	Delete selected picture.
As screensaver	Use current graphic as screensaver.
Use as logo	Use current graphic as (provider) logo (see also p. 60).

Sound manager

You can use the sound manager to record, play and manage sounds, ring tones and melodies (also melodies for several voices). If you wish, you can also download further ring tones from the Internet if you have stored URLs (links).

Menu → **Surf & fun** → **Sound manager**

A list of the stored ring tones/melodies is displayed:



Ring tones/melodies that you have recorded yourself or that have been received via SMS or downloaded by WAP/HTTP.



Ring tones/melodies that you have stored from the content of an SMS. You can re-send these via SMS/EMS.



Unmodifiable ring tones stored in the phone.



URL (optional): Surf online to download ring tones/melodies.

Internet The selected Internet page is loaded.



Load via HTTP (optional):

Internet Enter Internet address (URL). You can start downloading with **OK**.

Individual recording

You can use the microphone built into the telephone to record tones, melodies or sounds. These recordings can then be used as ring tones.

<New sound>



My Sound 1



My Sound 2

Select



Select <New sound>.



Please start
recording

Info

Record

Record

Press.

Recording starts. The maximum time available and recording duration are displayed.



0:09 / 0:18 min

Stop

Stop

End recording.

Repeat Start new recording.**Save**

Enter the name under which the recording should be stored.


Save

Confirm.

Note

If there is a call during the recording, the recording is stored under a standard name and can be renamed later.

Playback

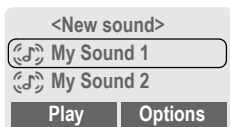

Select recording.

Play

The selected sound is played continuously.

Stop

End playback.

Note

The melody is converted into a device-specific format **only** when it is played for **the first time**. A short delay may occur.

Sound manager menu

Different functions are available depending on which entry is highlighted.

Options

Open menu.

Play

Play sound.

Ring tone for...

Assign a function/an anniversary to the ring tone.

Volume

Set the playback volume.

Delete

Delete sound.

Rename

Rename sound.


Attributes


Display name, size and recording time.

Capacity

Display available capacity (in kByte) for sound manager, bitmap viewer, Games & More and SMS archive.

Receive melody

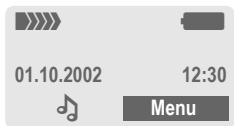

When a melody is received via **SMS** a note symbol  is shown in the display. Press the control key (left) to start the sound manager.

When downloading via **WAP/HTTP**, the sound manager automatically opens as soon as the process is completed (Internet addresses, p. 14; WAP-Profil, p. 39; HTTP profile, p. 41).

Note

The ring tone (p. 61), the reminder tones (p. 63) and handsfree are reproduced over the loudspeaker. Do not put the telephone to your ear when it is ringing or if you have switched on the handsfree function (p. 17). Otherwise you can cause severe, lasting damage to your hearing.

Tones or melodies that you have received via SMS or have downloaded via WAP/HTTP may be louder than the pre-set tones.

Please make sure that you have accepted the call before putting the telephone to your ear. This will avoid damage to your hearing caused by a loud ring tone.

Ring tone for...

You can choose a special melody for the call types/functions listed below.

Menu → Surf & fun → Sound manager

Options Open menu.



Select **Ring tone for...**



Select call type/function:

 **Calls**

Group calls

Other calls

Alarms

Messages

Cell broadcast

Select Confirm.



Choose a melody from the list.

Select Confirm.


Note

For **Other calls**, a special ring tone can be assigned to each of two phone numbers, depending on your network provider.

Alarm clock

Menu → **Organiser** → **Alarm clock**

Use this function to set a **single** time for the alarm call. The alarm sounds even when the phone is switched off.

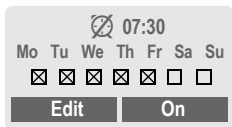

On / Off Activate/deactivate the alarm.

Setting

Edit Display the set time and dates for the alarm calls.
Set the time for the alarm call (hh:mm).



Navigate to the days.

Edit Set the days for the alarm call.

OK Confirm settings.

Note



Alarm clock switched on.




Alarm clock active (display in standby mode).



Alarm clock switched off.

Alarms

Menu → **Organiser** → **Alarms**

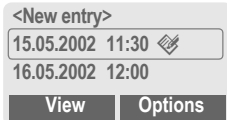

New appointment



Select <New entry>.



Make the entries field by field.

Type:



Memo. A text with up to 19 letters may be added.



Call. Enter phone number. Shown with alarm.



Meeting.

Description: A short description can be entered.

Reoccurrence: Select period for repeating the alarm.

Date: Enter start date.

Time: Enter start time.

Save Store the appointment.

Note

Options See list menu, p. 48.

If an alarm is missed it appears in the list of missed appointments (p. 50).

Greetings

Menu → **Organiser** → **Greetings**

Your phone will remind you of special events so you do not forget them any more.

New event



Select <New entry>.



Make the entries field by field.

Type:



Birthday



Anniversary



Special event

Name: Enter a short description.

Date: Enter start date.

Time: Enter start time.

Note



Copy name from the Phone-book.

Options

See list menu.

Greetings are automatically set to recur annually.

If an alarm is missed it appears in the list of missed appointments (p. 50).

50 entries for appointments and greetings and 10 entries for notes can be made in the organiser.

List menu

Options Open menu.

View	Display entry.
Activate/Deactivate	Activate or deactivate alarm (only if the alarm has not elapsed yet or is a greeting).
Change	Open appointment for editing.
New entry	Enter new appointment.
Delete	Delete entry.
Delete all	Delete all appointments after confirmation.
Send SMS...	as entry: Send alarm to recipient. as text: Send alarm as SMS message.
Capacity	Display number of entries.

Reminder

An alarm will remind you of the event twice:

- 24 hours before the date of the event as entered.
- On the day of the event with the following options:

Options Open menu

SMS	Send an SMS with standard (changeable) text.
Call	Dial the phone number.
Pause	Repeat the alarm after 5 minutes.
Off	Stop the alarm.

If an alarm is missed (e.g. because you are making a phone call) it appears in the list of missed appointments (p. 50) with the same options as described above.

Note

An alarm sounds even when the phone is switched off (the phone does not switch to standby mode). To deactivate it press any key.

Deactivate all alarmsp. 56

Ringer settingp. 61

Set timep. 66

 Alarm activated  Alarm deactivated.

Pause Repeats the alarm after 5 minutes.

Notes

Menu → **Organiser** → **Notes**

Use your phone as a scratchpad.

New entry



Select <New entry>.



Enter the text, up to 50 letters (with T9 support, p. 77).

Options Open menu.

Save Store the entry.

Text menu

Options Open menu.

Save	Store the entry.
Text input (p. 77)	T9 preferred: Activate/deactivate T9 input. Input language: Select the language in which the text is to be composed.
Line feed	Enter line break.
Clear text	Delete the note.
Send	Send entry as text of an SMS message.

Display entry



Select entry

View

Open note.

Notes menu

Options

Open menu.

View	Display entry.
Change	Display the entry for changes.
New entry	Enter a new note.
Delete	Delete entry.
Delete all	Delete all notes after confirmation.
Confidential	Protect notes entry with phone code (p. 12).
Send	Send entry as text of an SMS message.
Capacity	Display number of entries.

Note

We recommend that you do not store any passwords (PIN, TAN etc.) as notes.

Missed alarms

Menu → **Organiser** → **Missed alarms**

Events with alarm which you have missed are listed and can be displayed.

Note

50 entries for appointments and greetings and 10 entries for notes can be made in the organiser.

Voice command

Phone functions can be started by simply saying a name. Up to 20 voice recordings for voice dialling (p. 25) or voice commands can be stored in your phone (not on the SIM card!).

Menu → **Organiser**
→ **Voice command**

A list of the functions available is displayed.



Select a function.

Record

Press.

Yes

Confirm selected function.

Start

Start recording.

A short signal sounds. Now say a command corresponding to the function and **repeat** it when prompted by a signal tone and a screen display. A beep confirms the recording that will be saved automatically.

Apply



Hold **down**. Start voice control (in standby mode).

When you now say the command, the function will be carried out.

Note

Noisy environments may affect the recognisability.

Voice command menu



Select the required entry with a voice command.

Options

Open menu.

Playing

Play back the recording belonging to the entry.

New record

Redo the recording for an entry.

Delete

Delete entry.

Delete all

Delete all entries after confirmation.

Calculator

Menu → **Organiser** → **Calculator**



Enter number (up to 8 digits).



Function "+" or "-".

Or



Press control key repeatedly on the right.



Repeat procedure with other numbers.



Result is displayed.

Calculator functions



Press control key repeatedly on the right:

.

Set decimal point.

=

Result.

+

Addition.

-

Subtraction.

*

Multiplication.

/

Division.

±

Toggle between "+" and "-".

%

Convert to percentage.



Save the number displayed.



Retrieve the number saved.

e

Exponent (maximum of two digits).

Special keys:



Set decimal point.



Add (hold **down**).

Currency conv.

Menu → **Organiser**
→ **Currency conv.**

You may calculate the exchange rates between three different currencies.

Enter the currency

If no currency has been entered yet, press **OK** for the first input.

Otherwise:

Options Open menu

New entry Select, then if:

Only Euro currencies:

List Press and select 1st Euro currency.

Select Confirm.


 Select second field.

List Press and select 2nd Euro currency.


Select Confirm.

OK Confirm.


Euro currencies and/or other currencies:

 Enter symbols for the currencies.

OK Confirm.


 Enter exchange rates.
Store with **Options** and **OK**.

Calculator functions


= Press control key repeatedly on the right.
.
Set decimal point.
=
Calculator result.
 Retrieve a saved number from the calculator.

Convert

Any combination of calculations may be made between the entered currencies.

 Select a combination of currencies from the list.

Select Confirm.

 Enter amount (up to 12 digits).

 The result is displayed.

Repeat Repeat conversion with other data.

Calculator menu

Options Open menu.

New entry Enter two new currencies.

Change Change the two currencies.

Delete Delete the two currencies.

Delete all Delete all currency combinations.

Most service providers offer you an external answering service. In this mailbox, a caller may leave a voice message for you

- if your phone is switched off or not ready to receive,
- if you do not want to answer calls,
- if you are making a phone call (and if **Call waiting** is not active, p. 64).

If the voice mail service is not part of your service provider's user package, you will need to register for it and the settings must be made manually. The procedure described below may vary slightly depending on the service provider.

Settings



Your service provider supplies you with two phone numbers:

Mailbox number

You call this phone number to listen to the voice mails left for you. To set it up:

Menu → Messages → Voice message

Select phone number from Phonebook or dial/change it and confirm with **OK**.

Call divert

Calls are diverted to this phone number. To set it up:

Menu → **Divert**

→ e.g. **Unanswered** → **Set**



Dial the number of the mailbox.

OK

Registration at the network will be confirmed after a few seconds.

For further information on call divert, see p. 64.

Play back messages



A new voice mail can be announced as follows:



Icon including beep.

Or



A text message announces a new voice mail.

Or

You receive a call with an automatic announcement.

Call your mailbox and play the message(s) back.



Hold **down** (if necessary enter mailbox number once only).

Confirm with **OK** or **Mailbox** depending on your service provider.

Outside your home network, you may need to dial a different mailbox number and enter a password to access your mailbox.

Some service providers offer information services (info channels). If reception is activated, you receive messages on the activated topics in your "Topic list".

Menu → Messages → Cell broadcast

Reception



You can activate and deactivate the CB service. If the CB service is activated, the standby time of the phone will be reduced.

Read new CB

All unread CB messages are displayed.

Topic list

You can add an unrestricted number of topics to this personal list from the topic index (**Topic index**). You can preset 10 entries with their channel numbers (ID) and, if applicable, with their names.

New topic

Select **New topic**.

- If no topic index (**Topic index**) is available enter a topic with its channel number and confirm with **OK**.
- If the topic index has already been transmitted select a topic and confirm with **OK**.

Selection from a list


Options Open list menu.

If a topic is selected in the list you can have a look at it, activate, deactivate, edit or delete it.

Auto display

CB messages are displayed in standby mode, longer messages are automatically scrolled. This display can be activated/deactivated for all or only new messages.

To switch to "full page view":

, then press **View CB**.

Topic index



The list of topics is displayed for you to choose from. If none are displayed, you must enter the channel numbers (ID) manually (**Topic list**). Please contact your service provider for details.

CB languages

You may define whether you want to receive Cell Broadcast messages in a specific language only or in all languages.

Displays



Topic activated/deactivated.



New messages received on the topic.



Messages already read.

If a profile is used, several settings are made with **one** function.

- Five profiles are standard with default settings, they can be changed however:

Normal envi.

Quiet environ.

Noisy environ.

Car Kit

Headset

- You can set two personal profiles (<Empty>).
- The special profile **Aircraft mode** is fixed and cannot be changed (p. 56).

If the phone is used by several people, they can each activate their own settings by selecting their individual profile.

Activate

Menu → Profiles



Select default profile or personal profile.

Select

Activate the profile.

☐ Normal envi.
 ☒ Quiet environ.
 ☐ Noisy environ.

OptionsSelect

- Active profile.

Setup

Edit a default profile or create a new personal profile:



Select profile.

Options

Open menu.

Change settings Select.

The list of available functions is displayed:

Ringer setting	p. 61
Volume	p. 62
Call screening	p. 63
Silent alert	p. 61
Key tones	p. 63
Info tones	p. 63
Illumination	p. 61
Big letters	p. 61
Bitmap style	p. 60

When you have finished setting a function, you return to the profile menu where you can change a further setting.

Profile menu

Options Open menu.

Change settings	Change profile settings.
Copy from	Copy settings from another profile.
Rename	Rename personal profile.

Car Kit

If an original Siemens Car Kit is used (p. 97) the profile is activated automatically as soon as the phone is inserted into the cradle (p. 76).

Headset

If an original Siemens headset is used (p. 96), the profile is activated automatically as soon as the headset is plugged in (p. 76).

Aircraft mode

All alarms (appointments, alarm clock) are deactivated. **It is not possible to modify this profile.** When you select this profile, the phone is switched off after a prompt.

Activate



Select

Scroll to **Aircraft mode**.

Activate the profile.

A security prompt must be confirmed.

The phone switches itself off automatically.

Normal operation

The next time you switch on the phone and return to normal operation the default profile **Normal envi.** will be activated.

Menu → My menu

Create your own menu with frequently used functions, phone numbers or WAP pages.

The list of 10 entries available is preset. However you can change it according to your wishes.

Activate



Select the required entry.

Select

Press.

Or



If the selected entry is a phone number, you can also call it with the Call key.

Change settings

You can replace any preset entry (1-10) with another entry from the selection list of **My menu**.



Select the required entry.

Options

Press.

Change settings

Select.

Set

Press.



Select the **new** entry in the selection list.

Set

Press.

If you have selected a phone number or a WAP favourite as a new entry, the relevant application opens for you to choose from.

Reset all

After confirmation and after entering the phone code, the default entries are set.

You can program an important phone number or a function on the control key (on the left) and the number keys 2 to 9 (speed dialling numbers). The phone number can then be dialled or the function can be started at the touch of a button.

Note

The control key (on the left) may already have been preset by the service provider (e.g. access to "SIM-services"). It may not be possible to modify this key assignment.

The soft key may sometimes be replaced automatically by / to access a new message for example.


Available key assignments:

Internet (WAP)	p. 37
Games & more	p. 40
Alarms	p. 47
Greetings	p. 48
Notes	p. 49
Alarm clock	p. 47
New SMS	p. 33
Inbox (SMS)	p. 32
Outbox (SMS)	p. 32
Screensaver	p. 60

Control key (on the left)

A function/number can be programmed on the control key (on the left) for fast access.

Change

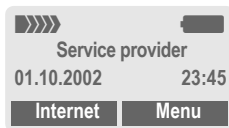

Internet

Press **briefly**.

Edit

Scroll to the application in the list.

- Assign a new application (e.g. **New SMS**) to the control key (on the left).
- Special case **Phone number**. Select a name (e.g. "Carol") from the Phonebook for assignment to the control key (on the left).

Select

Confirm setting.

Apply

The setting "Carol" is used here only as an example.

Carol

Hold **down**.

Speed dialling keys

Number keys 2 to 9 can be used as speed dialling numbers for fast access. For available key assignments see p. 58. Number key 1 is reserved for the mailbox number (p. 53).

Change

In standby mode:



Press number key (2 - 9).
If the key is not assigned:

Set

Press.

Or

New SMS

Press **briefly** (if set with **New SMS** for example).

Edit

Scroll to the application in the list.

Special case **Phone number**. Pick out a name for assignment to the key from the Phonebook.

Special case **Bookmarks**. Select a URL for assignment of the key from the bookmark list.

Select

Confirm setting.

Apply

Select a stored phone number or start a stored application (e.g. **New SMS**).

In standby mode e.g.:



Press.

The assignment of the number key 3 is displayed above the control key (on the right) e.g.:

New SMS

Hold **down**.

Or simply



Hold **down**.

Display

Menu → Setup → Display
→ Select a function

Language

Set the language of the display text. When "automatic" is set, the language of your home service provider is used. If a language that you do not understand happens to be set, the phone can be reset to the language of your home service provider with the following input:

*#0000# 

Text input

T9 preferred

Activate/deactivate intelligent text entry.

Input language

Select language in which the message is to be composed. Languages with T9 support are marked by the T9 symbol.

Screensaver

The screensaver shows a picture on the display as soon as a period that can be set by you has elapsed. The function is ended by an incoming call or by pressing any key. You can also receive and store screensavers via SMS/WAP.

Screensaver menu.

Enable	Activate screensaver.
Style	Analog clock or Bitmap/Animation.
Animation	Assign a Bitmap/Animation to the screensaver. The screensaver is activated automatically.
Preview	Display the screensaver.
Timeout	Set period after which the screensaver starts.
Security	Phone code protected termination of the screensaver.

Logo (provider logo)

Select a picture.

Bitmap style

You can select between two animations which are shown for example when entering a PIN.

Own greeting

Your own greeting is displayed instead of an animation when you switch on the phone.

Edit

On/Off.



Delete old message and create new message.

OK

Confirm change.

Big letters

You can choose between two font sizes for the display.

Illumination

Can be switched on and off (switching it off increases the standby time).

Contrast

You can set the display contrast.



Press control key at the top/at the bottom repeatedly to set the display contrast.

Audio

Menu → **Setup** → **Audio**
→ Select a function.

You can set the tones that sound in specific situations to suit your particular tastes.

Ringer setting

On/Off Activate/deactivate all ring tones.

Beep Reduce ringer to a short beep.

Note



Display: Beep.



Display: Ringer off.

Switch off ringer p. 86

Silent alert

Switch the silent alert on/off (also in addition to ringer).



Select:

Off

Standard

Helicopter

UFO

Shock

Mosquito

Train

Light effect

Press.

Select



Set type of silent alert.

Select

Confirm.

Silent alert

To avoid being disturbed by the ring-er, you can activate the silent alert instead..

Note

Please make sure that you have accepted the call before putting the telephone to your ear. This will avoid damage to your hearing caused by a loud ring tone!

Volume

You can set the volume separately for the following call types/functions.



Select:

 Calls

Group calls

Other calls

Alarms

Messages

Cell broadcast

Select

Press.




Set volume.

Select

Confirm.

Note

 Displays rising volume.

If two independent phone numbers are registered for your phone, you can set different volumes for them (p. 74).

Ring tones

You can assign special ring tones to the call types/functions listed below .



Select:

 Calls

Group calls

Other calls

Alarms

Messages

Cell broadcast

Select

Press.



Choose ring tone.

Select

Confirm.

Note

Sound manager.....p. 44

You can receive individual ring tones via SMS (p. 31) or download them via WAP and HTTP (p. 44).

Call screening



Only calls from numbers that are in the Phonebook or in a predefined group are signalled audibly or by silent alert. Other calls are only displayed.

If you do not accept these calls, they are diverted to your mailbox (if set, p. 53).

Note



Display:
when call screening is
activated.

Key tones

You can set the acoustic key tone:

Click or **Tone** or **Silent**

Minute beep

During the call, you hear a beep after every minute as a reminder of the time elapsed.

Info tones

Set service and alarm tones:

On/Off Activate/deactivate alarm tones.

Extended If activated, service tones are reproduced for an extended range of functions.

Keys

Menu → **Setup** → **Keys**
→ Select a function.

Any to answer

Use any key to accept incoming calls (except).

Auto key lock

If Auto key lock is activated, the keypad is locked automatically if no key has been pressed for one minute in standby mode. This prevents the phone from being used accidentally. However you can still be called and you can still make an emergency call.

The keypad can also be directly locked and unlocked as follows.



Hold **down**.

Key tones

You can set the type of acoustic key tone:

Click or **Tone** or **Silent**

Device

Menu → Setup → Device
→ Select a function.

Call waiting



If you are registered for this service, you can check whether it is set and you can activate/deactivate it (p. 18).

Hide ID



When you make a call, your phone number can be displayed on the recipient's display (depending on the service providers).

To suppress this display, you can activate the "Hide ID" mode for the next call or for all subsequent calls. You may need to register separately with your service provider for these functions.

Divert

You can set the conditions for which calls are diverted to your mailbox or other numbers.

Set divert:

The most common condition for divert is:

Unanswered calls



Select **Unanswered**.

(covers the **Not reachable**, **No reply**, **Busy** conditions, see right)

Select

Press.

Set



Select.
Enter the phone number to which the caller will be diverted (if not done already)

or



select this phone number from the Phonebook or via **Mailbox**.

OK

Confirm. After a short pause, the setting is confirmed by the network.

All calls



All calls are diverted.



Symbol in the top line of the display in standby mode.

Spec. divert**Not reachable**

Divert if the phone is switched off or out of range.

No reply

A call is only diverted after a delay (depends on the network). The period can be set to a maximum of 30 seconds in 5 second intervals.

Busy

Divert if a call is in progress. If **Call waiting** is activated (p. 18), you will hear the call waiting tone during a call.

Receiving fax

Fax calls are diverted to a number with a fax connection.

Receiving data

Data calls are diverted to a phone number with a PC connection.

Status check

You can check the current divert status for all conditions.

After a short pause, the current situation is transmitted by the network and displayed.



Condition set.

Not set.



Display, if status is unknown (e.g. on a new SIM card).

Clear all

All set diversions are cleared.

Note

Note that the divert is stored in the network and not in the phone (when the SIM card is changed for example).

Check condition or delete it

First select the condition.

Select Press.

Check status Select

or

Delete Select.

Reactivate divert

The last divert has been stored. Proceed as with "Set divert". The stored phone number is displayed. Confirm number.

Edit phone number

Proceed as with "Set divert". When the stored number is displayed:

Delete Press. The phone number is deleted.


Enter new number and confirm.

Menu → Setup → Device
→ Select a function.

Fact. settings

The phone is reset to the default values (factory setting) (does not apply to SIM card and network settings).

Alternative input in standby mode:

* #9999# 

Phone identity

The phone ID (IMEI) is displayed. This information may be useful for customer service.

Alternatively enter in standby mode:

* #06#

Clock

Menu → Setup → Clock
→ Select a function.

Time/date

The clock must be set correctly once at start-up.

Edit Press.



First enter the date (day/month/year), then the time (24 hours, including seconds).

Note

If the battery is removed for longer than about 30 seconds the clock must be reset.

Setting the date:

DD: Day (2-digit)

MM: Month (2-digit)

YYYY: Year (4-digit)

Time zones

Determine the time zone in which you are currently staying.




Select the required time zone from the list ...

Select

... and specify it.

Options

Open menu.

View	Displays selected time zone with name and date.
Auto time-zone 	The time zone is automatically set to local time by the network.
DST	Switch DST on/off. A sun symbol indicates that DST is activated.

Auto timezone



If this feature is activated, you will be asked if you want to change the time whenever you cross into a new time zone (if this feature is supported by the network with which you are registering).

Format date

DD.MM.YYYY or MM/DD/YYYY

Auto display

The time display in standby mode can be switched on and off.

Buddhist year

Switch to the Buddhistic calendar (not available in all models).

Auto off

The phone switches off each day at the set time.

Activate:

Time

Press.



Enter time (24 hr format).

OK

Confirm.

Deactivate:

Manual

Press.

OK

Confirm.

Connectivity

Menu → **Setup** → **Connectivity**
→ Select a function.

GPRS



(General Packet Radio Service)

GPRS is a new method for transmitting data faster in the mobile network. If you use GPRS, you can be connected to the Internet permanently if the network capacities suffice.

Some service providers do not yet support this service.

Yes/No

Activate or deactivate GPRS function.

Shown in the display:

GPRS

GPRS activated.

GPRS

GPRS available.

GPRS▶

GPRS connection active.

GPRS info

Display of information on the connectivity status.

Authentication

Edit

Activate encrypted WAP dial-up via GPRS (CHAP Challenge Authentication Procedure) or deactivate it (PAP Personal Authentication Procedure).

WAP profile settings

Up to 5 WAP profiles can be set (may be barred by the service provider). The entries may vary depending on your service provider. To set a new profile:



Select profile.

Edit



Open menu.

Select profile range and make your settings/entries field by field.

Edit

The entry card is displayed.

If necessary, check with your service provider for details:

Profile name:	Enter/change name.
WAP Parameters	
	IP address: Enter IP address.
	Port: Enter port number.
	Homepage: Enter homepage (p. 37), if not set by the service provider.
	Linger time: Time in seconds after which a connection is to be ended if no further entry is made or there is no exchange of data.

CSD settings

(Circuit Switched Data)

Dial-up no.: Enter ISP number.

Call type: Select ISDN or Analogue.

Login name: Enter login name.

Password: Enter password (shown as a series of asterisks).

GPRS settings

(General Packet Radio Service)

GPRS deactivated: Yes/No. (Only possible when GPRS function is switched on, p. 67)

APN: Enter the address of your service provider.

Login name: Enter login name.

Password: Enter password (shown as a series of asterisks)

Save

The settings are stored and the profile list is shown.

Activate the set WAP profile (p. 39).

Set HTTP profiles

Up to 5 profiles can be defined (may have been barred by the service provider). The settings have normally been carried out by the service provider in advance. To set a new profile:



Select profile.

Options Open menu.

Change settings



Select and confirm.

Select profile range and make your settings/entries field by field.

Edit The entry card is displayed.

If necessary, check with your service provider for details:

HTTP parameters **Linger time:** Enter time in seconds after which a connection should be terminated if no input or data exchange takes place.

Deactiv. Proxy: Yes/No.

Proxy host: Enter host names.

Proxy port: Enter port number.

Proxy login: Enter user name.

Proxy password: Enter password.

CSD settings

(Circuit Switched Data)

Dial-up no.: Enter ISP number.

Call type: Select ISDN or Analogue.

Login name: Enter login name.

Password: Enter password (shown as a series of asterisks).

GPRS settings

(General Packet Radio Service)

GPRS deactivated: Yes/No. (Only possible when GPRS function is switched on, p. 67)

APN: Enter the address of your service provider.

Login name: Enter login name.

Password: Enter password (shown as a series of asterisks).

DNS1/DNS 2: (optional)

Save

The settings are stored and the profile list is shown.

Activate the set HTTP profile (p. 42).

Set SMS profiles

Menu → Setup → Connectivity
→ Select a function.

A maximum of 5 SMS profiles can be set. They define the transmission characteristics for an SMS. The pre-setting depends on the SIM card inserted.

To set a new profile:



Select profile.

Options Open menu.

Change settings Select and confirm.

Service centre Enter or change the phone numbers of the service centre as supplied by the service provider.

Recipient Enter the standard recipient for this transmission profile or select from the Phonebook.

Message type **Manual**
The message type is requested for each message.

Standard text

Normal SMS message.

Fax

Transmission via SMS.

E-mail

Transmission via SMS.

New

You may need to obtain the required code number from your service provider.

Validity period

Select the period in which the service centre tries to deliver the message:

Manual, 1 hour, 3 hours, 6 hours, 12 hours, 1 day, 1 week, Maximum*

*) Maximum period that the service provider permits.

Status report

You are given confirmation of the successful or unsuccessful delivery of a sent message. This service may be subject to a charge.

Direct reply

The reply to your message is handled via your service centre when **Direct Answer** is activated (for information please contact your service provider).

SMS via GPRS

When this function is activated, SMS messages are automatically sent via GPRS (if available).

Requirement: GPRS is activated (p. 67). Ensure that your service provider offers this function.

Fax/data mode using a PC

Menu → Setup → Connectivity
→ Fax/data mod.
→ Select a function.

With the phone and a connected PC, you can transmit and receive faxes and data. Appropriate software for data communication/fax communication must be available on your PC and there must be a connection to the phone.

Fax and data services must be enabled by the service provider. Different networks support different types of fax/data reception; please contact your service provider for details.

Edit Set the required mode.

Rec fax/data



Your service provider can give you a number for telephoning and a fax/data number.

The call is signalled by a special ring-er and the type of call (fax or data) is displayed.

Now start the communication program in your PC to receive the fax/data.

Send vce/fax



Set this function on the phone **before** transmission so that you can switch from voice mode to fax mode.

While the connection is being setup, the following function is available for two seconds:

Voice/fx Switch to **Send vce/fax** mode; you may now send a fax.

Voice/fax rec

(**Only** if a special fax or data number is not available).

Start the required communication program in your PC and switch on the function at the phone **during** the call (the PC accepts the connection).

End transmission

End transmission with PC software and/or press

Security

Menu → **Setup** → **Security**
→ Select a function.

The phone and SIM card are protected against misuse by several security codes.

Codes

PIN control, Change PIN, Change PIN 2, ChangePhonecode, see p. 12.

Babysitter

(Phone code protected)

Only **one** phone number can be dialled. Hold down control key **on the right** (p. 20).

Allow only



(PIN 2/phone code protected)

Dialling is restricted to the numbers in the Phonebook, new entries are not possible. If only area codes are entered, the relevant phone numbers can be added to these manually before dialling.

Depending on whether the Phonebook is stored on the SIM card or in the phone, the PIN 2 or phone code is requested before changes can be made.

Only



(PIN 2 protected)

The dialling options are restricted to SIM protected numbers in the Phonebook. If only area codes are entered, the relevant phone numbers can be added to these manually before dialling.

Last 10 only



(Phone code protected)

Calls are limited to the call list of "dialled numbers" (p. 29). This list can be filled with phone numbers specifically for this purpose: First delete the call list, then create "new entries" by dialling phone numbers and cancelling before the connection is established.

This SIM only



(Phone code protected)

Your phone is prevented from being used with a **different** SIM card.

Barrings



Barring restricts the use of your SIM card (not supported by all service providers). You need a 4 digit password which your service provider will give you. You may need to be registered separately for each barring.

All outgoing

All outgoing calls except emergency number 112 and 999 are barred.

Outgo internat

Only national calls can be made.

Out.int.x home

International calls are not permitted. However you can make calls to your home country when abroad.

All incoming

The phone is barred for all incoming calls (the forwarding of all calls to the mailbox offers a similar effect).

When roaming

You do not receive calls when you are outside your home network. This means that no charges are incurred for incoming calls.

Status check

The following information can be displayed after a status check:



Barring set.

Barring not set.

Status unknown
(e.g. new SIM card).

Clear all

All barrings are cleared. A password which the service provider will give you is necessary for this function.

Network

Menu → **Setup** → **Network**
→ Select a function.

Line



This function is only displayed if it is supported by the service provider.

Two independent phone numbers must be registered on the phone.

Select

Select the currently used phone number.

1 >>> Display the current phone number.

Note

Settings for phone numbers p. 86

Lock line

(Phone code protected)

You may limit usage to one phone number.

Network info

The list of GSM networks currently available is displayed.



Indicates forbidden service providers (depending on SIM card).

Choose network

The network search is restarted. This is useful if you are **not** on your home network or want to register on a **different** network. The network info list is rebuilt when **Auto network** is set.

Auto network

Activate/deactivate, see also "**Choose network**" above. If "Automatic network" is activated, the next network is dialled in the order of your "preferred networks". Otherwise a different network can be selected manually from the list of the available GSM networks.

Net operator

A list of all known GSM network providers worldwide is displayed with the current codes.

Pref. network

The service providers you prefer when you leave your home network can be entered here (e.g. if there are several networks that differ in price).

Note

If the field strength of the preferred network is not strong enough when you switch the phone on, the mobile phone may register with a different network. This can change when the telephone is next switched on or if you manually select another network.

Your service provider is displayed:

List Display list of preferred networks.

Create new entry:

- Select empty line, press **Entry**, then select another entry from the list of service providers and confirm.

Change/delete entry:

- Select entry, press **Change**, then select a different entry from the list of service providers and confirm it or press **Clear**.

Band selection



Select either GSM 900 or GSM 1800.

Fast search

When this function is active, network reconnection is speeded up (standby time is reduced).

User group



Menu → Setup → Network
→ Select a function.

If offered by the service provider, this service enables groups to be formed. These have access for example to internal (company) information or special tariffs apply to them. Check with your service provider for details.

Active

Activate/deactivate function. "User group" must be deactivated for normal phone use (phone code, p. 12).

Select group

You may select or add groups other than the preferred groups (see below). The service provider supplies you with code numbers for the groups.

Outgo. access

In addition to network control for a user group, it is possible to set whether outgoing calls outside the group are permitted. If the function is deactivated, only calls within the group are permitted.

Preferred grp

If activated, only calls within this standard user group can be made (depending on the network configuration).

Accessories

Menu → **Setup** → **Accessories**
→ Select a function.

Car Kit

If an original Siemens Car Kit is used (p. 97) the profile is activated automatically as soon as the phone is inserted into the cradle.

User-definable settings

Auto answer

(factory default: off)

Calls are accepted automatically after a few seconds.



Indication on the display.



Switch between the phone and Car Kit Portable during a call.

Auto off

(factory default: 2 hours)

The phone is powered by the car's power supply. The time between switching off the ignition and deactivation of the phone can be adjusted.

Automatic settings:

- Permanent illumination: switched on.
- Auto key lock: switched off.
- Charging the phone battery.
- Automatic activation of the Car Kit profile (p. 56) when the phone is inserted.

Headset

If an original Siemens Headset is used (p. 96) the profile is automatically activated when the headset is plugged in.

User-definable settings

Auto answer

(factory default: off)

Calls are accepted automatically after a few seconds (except where the ringer is switched off or set to beep). You should therefore be wearing the headset.

Automatic setting

Accept call with the Call key or PTT key (Push To Talk) when the key lock is activated.

Auto answer

If you fail to notice an incoming call there is a risk that it may be overheard by others.

"T9" deduces the correct word from the individual key entries by making comparisons with an extensive dictionary.

Setup

Menu → Setup → Display → Text input

Activate, deactivate T9

T9 preferred Select.



Activate T9.

Select

Confirm.

T9 **Abc** on the display indicates for example whether lowercase/uppercase is active.

Select input language

Select the language in which you want to compose your message.

Input language Select.

Select

Confirm, the new language is set.

Languages with T9 support are marked by the T9 symbol.

Create a word using T9

Since the display changes as you proceed it is best if you finish a word without looking at the display.

You simply press the keys where the relevant letter is located **once only**. For "hotel", for example:

 Press briefly for **T9** **Abc** then

4 ghi

6 mno

8 tuv

3 def

5 jkl

1 

Press. A blank ends a word.

Do not use special characters such as Ä but write the standard character, e.g. A, T9 will do the rest for you.

Note

0 +

Full stop. Ends a word when a blank follows. Acts as a wildcard character for an apostrophe/hyphen in the word:

e. g. **provider.s** = provider's.

Press control key at the bottom to end a word.





Press briefly: Switch between: **abc**, **Abc**, **T9abc**, **T9Abc**, **123**. Status indicator in the top line of the display.

Hold down: All input modes are displayed.

* 

Press briefly: Write special characters (p. 81).

Hold down to open the input menu (p. 82).

T9 dictionaries for other languages can be found at: www.my-siemens.com/t9

T9 word suggestions

If several options are found in the dictionary for a key sequence (a word), the most probable is displayed first. If the word you want has not been recognised, the next suggestion from T9 may be correct.

The word must be **highlighted**. Then press




The displayed word is replaced with a different word. If this word is also incorrect,



press again. Repeat until the correct word is displayed.

If the word you want is not in the dictionary, it may be written without T9.

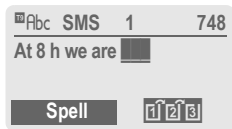

To add a word to the dictionary:

Spell Select.

The last suggestion is deleted and the word may now be entered without T9 support. Press **Save** to add it automatically to the dictionary.

Correct a word

Words created **using** T9:



Move word by word to the left/right until the required word is highlighted.



Scroll through the T9 word suggestions again.



Deletes the character to the left of the cursor **and** displays a new possible word!

Words **not** created using T9:



Move character by character to the left/right.



Deletes the character to the left of the cursor.



Characters are inserted at the cursor position.

Note

Within a "T9 word", individual letters may not be edited without removing T9 first. In most cases it is better to rewrite the complete word.

T9® Text Input is licensed under one or more of the following: U.S. Pat. Nos. 5, 818, 437, 5, 953, 541, 5, 187, 480, 5, 945, 928, and 6, 011, 554; Canadian Pat. No. 1,331,057; United Kingdom Pat. No. 2238414B; Hong Kong Standard Pat. No. HK0940329; Republic of Singapore Pat. No. 51383; Euro.Pat. No. 0 842 463 (96927260.8) DE/DK, FI, FR, IT, NL, PT, ES, SE, GB; and additional patents are pending worldwide.

Display indicators



Signal strength.



Charging.



Battery level.



All calls are diverted.



Ringer off.



Short ringer (beep) only.



Ringer only, if the caller is stored in the Phonebook.



Alarm set.



Alarm clock active.



Key lock active.

Phone numbers/names:



On the SIM card



On the SIM card (PIN 2 protected).



In the phone memory.



No network access.



Function activated/deactivated.



Phonebook.



Indicates whether upper- or lowercase letters are active.



Text input with T9.



GPRS activated.



GPRS available.



WAP Online.



WAP via GPRS Online.



WAP No network.



Headset mode.



Loudspeaker Car Kit.



Additional handset mode.



Car Kit active.



Auto answer feature on.

Organiser symbols



Memo.



Meeting.



Call.



Birthday.



Anniversary.



Important event.

Control key (on the left/on the right)



Message received.



Voice mail received.



Unanswered call.



Picture received.



Meldody/ring tone received.



SIM memory full.



SIM services.



Store in Phonebook.



Retrieve from Phonebook.




T9 word selection.

Control codes (DTMF)

Send control code

You can enter control codes (digits) during a call so that an answering machine can be controlled remotely. These digits are directly transmitted as DTMF tones (control codes). The sounds can also be heard when the microphone is switched off.

 **menu** Open call menu.

Send DTMF tones Select.

Use the Phonebook

Store phone numbers **and** control codes (DTMF tones) in the Phonebook like a normal entry.



Enter phone number.



Press until a "+" appears on the display (pause for connection setup).



Enter DTMF signals (digits).



If necessary enter further pauses of three seconds each to ensure correct processing at the destination.



Enter a name.

 **Save** Press.

You can also store the DTMF tones (digits) without a phone number and send them during a call.

CSD

(Circuit Switched Data)

Data transfer is made via a data connection to a default IP address of your network provider or service provider. This connection can be used for the exchange of data (e.g. for access to the Internet or for downloading games and applications as well as for using WAP services).

As long as this connection is established in order to use services or to download applications from the Internet, charges for connection accrue according to the price list of your network provider or service provider.

Divert set

Divert

Diverts the caller to the mailbox, for example, if **Busy** (p. 64) is set and the **Call waiting** (p. 64) function is activated.

Emergency number(SOS)

By pressing the control key **SOS**, you can make an emergency call on any network without a SIM card and without entering a PIN (not available in all countries).

This must only be used in real emergencies!

EMS

(Enhanced Messaging Service)

Besides (formatted) texts, you can also send

- pictures (bitmaps),
- sounds,
- animations (sequence of 4 pictures)


using the EMS.

The segments specified above can be together or transmitted individually on an SMS. With EMS, pictures and sounds can also be sent (e.g. as ring tones and screensavers). This can cause messages that exceed the length of a single SMS. In this case a concatenation of individual segments to a single message is made.

Enter special characters



Press **briefly**. The character map is displayed:

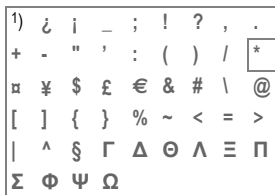

1) Line skip



Navigate to character.

Select

Select character.

Extending numbers in the Phonebook

When entering a phone number in the Phonebook, digits can be replaced by a question mark "?":



Press **down**.

These wildcards must be completed for the call.

Select the phone number in the Phonebook to call:



Press.



Replace "?" with digits.



Press to dial phone number.

GPRS



(General Packet Radio Service)

GPRS is a new method for transmitting data in the mobile network faster. If you use GPRS, you can be connected to the Internet permanently if the network capacities suffice.

Some service providers do not yet support this service.

HTTP

(Hypertext Transfer Protocol)

HTTP is the name for the protocol that controls transmission of data in the Internet. Via HTTP connections, you can download applications and games (Games & More, p. 40) and ring tones (sound manager, p. 44) for several voices (polyphone ring tones) from the Internet. For information on the configuration of the HTTP connection using HTTP profiles see p. 69.

Input menu

During text input:



Hold **down**. The input menu is displayed:

Format


Mark text

Copy/Add

Input language

International dialling codes

Many international dialling codes are stored in your phone.

In standby mode () is not necessary when dialling from the Phonebook):



Hold **down** until a "+" is displayed. This replaces the first two digits of the international dialling code.



Press.

Select the required country. The international dialling code is displayed. Now add the national number (in many countries without the first digit) and press the Call key.

JAD ↓ and JAR

Three file types occur when using Java™:

The JAD file (Java Descriptor)

These files contain information on the application (JAR file) and their address for downloading. By activating a JAD file, the connection to the Internet is established and the executable application is loaded.


The JAR file (Java archive)

This file includes the executable application. By activating a JAR file, the application is started.

Combined files

These files result from JAR files being loaded via JAD files. In this case the JAD file is inserted into the JAR file. The display icon is the same as for JAR files.

The following icons appear when using Java™:

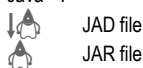

JAD file

JAR file

Java™

Java™ allows you to use numerous games and applications on your mobile phone. You can download these applications from the Internet and install them on your mobile phone. The application can be started after installation. Please refer to the operating instructions for each application.

Siemens does not guarantee that the downloaded and installed Java applications work well with your mobile phone (see also p. 42).

Message store full

The SIM memory is full when the message symbol flashes. **No** more SMS messages can be received. Delete or save messages (p. 32).

Operating times

A fully charged battery provides 60 to 300 hours of standby time or 90 to 360 minutes of talk time. The standby times/talk times are average values and depend on the operating conditions (see table):

Operation carried out	Time (min)	Decrease in the standby time by
Calling	1	30 to 60 minutes
Display back light *	1	30 minutes
Network search	1	5 to 10 minutes
* key input, games, organiser etc.		

If the phone is exposed to heat the standby time is considerably reduced. Avoid exposing the phone to direct sunlight or placing it on a radiator.

Outside the home network

If you are outside your "home network" your phone automatically dials a different GSM network (p. 74).


 
Own numbers

You can enter your "own numbers" in the Phonebook (e.g. fax) for information. These numbers can be changed or deleted and also sent as an SMS.

Phone number memo

If you enter a number with the keypad during a call, the person on the other end of the line can hear the numbers being entered. It can be stored or dialled after the current call has ended.

Phone number/URL in SMS

Numbers **highlighted** in the message can be dialled (press ) or they can be stored in the Phonebook (p. 21). URLs (Internet addresses) and the HTTP download can be accessed directly (press ). Check your WAP (p. 39) and HTTP settings (p. 41)!

Quality declaration for battery



The capacity of your mobile phone battery is reduced each time you charge/discharge it. Storing the battery at temperatures that are too high or too low also causes a gradual loss of capacity. This can cause the operating times of your mobile phone to reduce significantly per usage cycle.

The battery is, however, designed to be charged and fully discharged within a period of six months from when the mobile phone was purchased. Following this six-month period, we recommend replacing your battery if you experience a significant drop in performance. Only purchase original Siemens batteries.

Quick menu selection

All menu functions are numbered internally. By entering these numbers one after the other the function may be started at once.

For example, to compose a new SMS:

Menu	Press.
 1 ∞	for Messages
 1 ∞	for New SMS

If your service provider offers additional functions (SIM services) in the menu system, the numerical order may change.

Service numbers

Numbers that you are offered by your service provider may be stored in the Phonebook. You can call local or nationwide information services or use services of the service provider.

Signal strength



Strong signal.



A weak signal reduces the call quality and may lead to loss of the connection. Change your location.

SIM card problems

You have inserted your SIM card, but the following message appears:

Please insert SIM card

Please ensure that the card is **correctly** inserted and the contacts are clean; if necessary, clean them with a dry cloth. If the card is damaged, please contact your service provider.

See also "Questions & Answers", p. 89.

SIM services (optional)

Your service provider may offer special applications such as mobile banking, stock market etc. via the SIM card.

If you have such a SIM card the SIM services will appear at the top of the main menu or directly above the control key (on the left).



Symbol of the SIM services.

If there is more than one application they are displayed in the "SIM services" menu.

Menu → SIM serv

With the SIM services menu, your phone is ready for the future and will support additions to your service provider's user package. For further information, please contact your service provider.


SMS status report

If the phone was unable to send the message to the service centre a retry option is available. If this attempt also fails, contact your service provider.

The **message sent!** text only indicates that the message has been transmitted to the service centre which now tries to deliver the message within a certain period.

See also "Validity", p. 70.

SMS Push

This function allows you to call up an Internet address (URL) directly from an SMS you received. After selecting it, the URL is highlighted. By pressing the Call key  the WAP browser is automatically started and the highlighted Internet address is called up.

Software version

To display the software version of your phone in standby mode enter:

*** #06#**, then press **Info**.

Switch off ringer

Switch off the ringer only for the **current** call/alarm (not if "Any key answer" p. 63, is active):



Hold **down**.

The call is still displayed. When you now accept or reject the call or switch the phone off and on again, this function is ended.

Switch on/off all sounds

All signal tones (also the ringer) can be deactivated and activated in standby mode:



Hold **down**.

A call is still displayed. Silent alert remains active if it has been activated previously. The audio settings are not affected. By switching the phone off and on again, this function is also ended (see also p. 86).

T9 language versions

If you want to load another dictionary (T9 language version) to support writing SMS in a different language, a comprehensive selection of dictionaries to be downloaded via the Internet and the relevant installation notes can be found at:

www.my-siemens.com/t9

Two phone numbers



Special settings can be made for each phone number (e.g. melody, call divert etc.). Switch to the required number first.

To switch the phone number/line in standby mode:



Press.



Press.

WAP

(Wireless Application Protocol)

A technical standard that is the basis of the connection between mobile radio networks and the Internet. WAP enables mobile surfing using the mobile phone in the Internet, downloading of games and applications and the use of WAP services such as news, stock exchanges or information.

WAP usage

Start with...

You can set which functions are to be displayed after Internet access:



Open the browser menu.

More ... Select.

Setup Select.

Start with...

Select, then select from the list:

Start menu

Browser menu

Homepage

Resume

Bookmarks

Enter the Internet address (URL)

A WAP page must be shown on the display (online or offline). Then:



Open the browser menu.

Go to URL Select.



Enter URL and confirm.
The connection is established.

Bookmarks (URL)



You can store a list of your favourite Internet addresses (URL) in the phone (available offline and online, depending on the service provider):

Save:



Open the browser menu.

Bookmarks Select.

Online (save):

Add bookmark

The current WAP address is added as a bookmark.

Offline (save):

(Empty) Select.

Menu Open menu.

Edit Select, enter name/header and URL and confirm.

Save Press.

Apply:



Open the browser menu.

Bookmarks Select.



Select entry.

Go The selected call is set up.

Special characters for WAP usage:



Press repeatedly for:

., ? ! ' " 0 - () @ / : _ + ~ &

Changing the home page

The address of the homepage is entered in the (access) profile (p. 70). You can change it in standby mode (if permitted by the service provider!):

Menu → Setup
→ Connectivity
→ WAP profiles

Select the profile for example:

e-Commerce Select.

Edit The entry card is displayed.

WAP Parameters, then select
Homepage.



Enter new address. Go to the end of the entry card.

Save Press.

Without SIM card



If you switch on the phone **without** SIM card, you can use a few functions of the phone.

Menu Press control key (on the right). The functions are displayed.

SOS Emergency number, SOS

If you have any questions about using your phone, visit us at www.my-siemens.com/customer-care anytime. In addition we have listed some frequently asked questions and answers below.

Question	Possible causes	Possible solution
Phone cannot be switched on.	On/Off key not pressed long enough.	Press On/Off key for at least two seconds.
	Flat battery.	Charge battery. Check charging indicator in the display.
	Battery contacts dirty.	Clean contacts.
	See also below under: "Charging error".	
Standby time is too short.	Frequent use of the organiser and games.	Restrict use if necessary.
	Speed search active.	Deactivate speed search (p. 75).
	Display illumination on.	Switch off display illumination (p. 61).
	Unintentional keystrokes (illumination!).	Activate key lock (p. 63).
Charging error (charge icon not displayed).	Battery totally discharged.	1) Plug in charger cable. 2) Wait up to 2 hours until the charge icon is displayed. 3) Charge battery as usual.
	Temperature out of range: 5° C to 40 °C.	Make sure the ambient temperature is right, wait a while, then recharge.
	Contact problem.	Check power supply and connection to the phone. Check battery contacts and device interface, clean them if necessary, then insert battery again.
	No mains voltage.	Use different mains power socket, check mains voltage.
	Wrong charger.	Only use original Siemens accessories.
	Battery faulty.	Replace battery.
SIM error.	SIM card not correctly inserted.	Make sure that the SIM card is correctly inserted (p. 6).
	SIM card contacts dirty.	Clean the SIM card with a dry cloth.
	SIM card with wrong voltage.	Use 3 V SIM cards only.
	SIM card damaged (e.g. broken).	Inspect the damage. Return the SIM card to service provider.

Question	Possible causes	Possible solution
No connection to network.	Signal weak.	Move higher, to a window or open space.
	Outside GSM range.	Check service provider coverage map.
	SIM card not valid.	Contact the service provider.
	New network not authorised.	Try manual selection or select a different network (p. 74).
	Network barring is set.	Check barrings (p. 73).
	Network overloaded.	Try again later.
Phone loses network.	Signal too weak.	Reconnection to another service provider is automatic (p. 74). Switching the phone off and on may speed this up.
Calls not possible.	2nd line set.	Set line 1  (p. 74).
	New SIM card inserted.	Check for new restrictions.
	Charge limit reached.	Reset limit with PIN 2 (p. 30).
	Credit used up.	Load credit.
Certain uses of the phone not possible.	Call restrictions are set.	Barrings may be set by your service provider. Check barrings (p. 73).
No entries possible in Phonebook.	Phonebook is full.	Delete entries in Phonebook (p. 23).
Voice mail does not work	Call divert to the mailbox not set.	Set call divert to the mailbox (p. 64).
SMS (message)  flashes.	SMS memory full.	Delete messages (SMS), (p. 32) or store them in the archive (p. 33) to make room.
Function cannot be set.	Not supported by service provider or registration required.	Contact your service provider.
Memory problems with Games&More, ring tones, pictures, SMS archive.	Phone memory full.	Delete files where necessary.
No WAP access, no HTTP download possible.	Profile not activated, profile settings wrong/incomplete.	Activate WAP profile (p. 39), check settings (p. 68) and activate HTTP profile (p. 42), check settings (p. 69). If necessary consult your service provider.

Question	Possible causes	Possible solution
Message cannot be sent.	Some service providers do not support this service.	Check with your service provider.
	Phone number of the service centre is not set or is wrong.	Set service centre (p. 70).
	SIM card contract does not support this service.	Contact your service provider.
	Service centre overloaded.	Repeat message.
	Recipient does not have a compatible phone.	Check.
EMS pictures&sounds are not displayed at the destination phone	The destination phone does not support the EMS standard.	
No Internet access possible.	Wrong WAP profile set or settings wrong, incomplete.	Check settings, if necessary consult your service provider.
PIN error / PIN2 error.	Three wrong entries.	Enter the PUK (MASTER PIN) provided with the SIM card according to the instructions. If the PUK (MASTER PIN) has been lost, contact your service provider.
Phone code error.	Three wrong entries.	Contact Siemens Service (p. 92).
Service provider code error.	No authorisation for this service.	Contact your service provider.
Too few/too many menu entries.	Functions may have been added or removed by your service provider via the SIM card.	Check with your service provider.
No fax possible.	Incorrect settings in the PC.	Check settings (p. 71).
	No authorisation for this service.	Contact your service provider.
Charge counter does not work.	Charge pulse not transmitted.	Contact your service provider.
Damage		
Severe shock.	Remove battery and SIM and insert them again. Do not dismantle phone!	
Phone became wet.	Remove battery and SIM card. Dry immediately with cloth, do not heat. Dry connector contacts thoroughly. Stand unit upright in an air current. Do not dismantle phone!	

Reset settings to the factory default (p. 66): * # 9 9 9 9 #



We offer fast, individual advice! You have several options:

Our online support on the Internet:

www.my-siemens.com/customer-care

We can be reached any time, any place. You are given 24 hour support on all aspects of our products. Here you will find an interactive fault-finding system, a compilation of the most frequently asked questions and answers, plus user guides and current software updates to download.

You will also find the most frequently asked questions and answers in the chapter entitled "Questions & Answers" on p. 89 of this user guide.

No exchange or repair services are offered in those countries where our product is sold by unauthorized dealers.

If repair work is necessary, please contact one of our service centres:

Abu Dhabi	0 26 42 38 00
Argentina	0 80 08 88 98 78
Australia	13 00 66 53 66
Austria	05 17 07 50 04
Bahrain	40 42 34
Bangladesh	0 17 52 74 47
Belgium	0 78 15 22 21
Bolivia	0 21 21 41 14
Bosnia Herzegovina	0 33 27 66 49
Brazil	0 80 07 07 12 48
Brunei	02 43 08 01
Bulgaria	02 73 94 88
Cambodia	12 80 05 00
Canada	1 88 87 77 02 11
China	0 21 50 31 81 49
Croatia	0 16 10 53 81
Czech Republic	02 33 03 27 27
Denmark	35 25 86 00
Dubai	0 43 96 64 33
Egypt	0 23 33 41 11
Estonia	06 30 47 97
Finland	09 22 94 37 00
France	01 56 38 42 00
Germany	0 18 05 33 32 26
Greece	0 80 11 11 11 16
Hong Kong	28 61 11 18
Hungary	06 14 71 24 44
Iceland	5 11 30 00
India	01 13 73 85 89 - 98
Indonesia	0 21 46 82 60 81
Ireland	18 50 77 72 77
Italy	02 66 76 44 00
Ivory Coast	21 35 02 35
Jordan	0 64 39 86 42
Kenya	2 72 37 17
Kuwait	2 45 41 78
Latvia	7 50 11 14
Lebanon	01 44 30 43
Libya	02 13 50 28 82
Lithuania	8 52 74 20 10
Luxembourg	43 84 33 99
Macedonia	02 13 14 84
Malaysia	03 21 63 11 18
Malta	00 35 32 14 94 06 32
Mauritius	2 11 62 13

Mexico	01 80 07 11 00 03
Morocco	22 66 92 09
Netherlands	0 90 03 33 31 00
New Zealand	08 00 27 43 63
Nigeria	0 14 50 05 00
Norway	22 70 84 00
Oman	79 10 12
Pakistan	02 15 66 22 00
Paraguay	8 00 10 20 04
Philippines	0 27 57 11 18
Poland	08 01 30 00 30
Portugal	8 08 20 15 21
Qatar	04 32 20 10
Romania	02 12 04 60 00
Russia	8 80 02 00 10 10
Saudi Arabia	0 22 26 00 43
Serbia	01 13 22 84 85
Singapore	62 27 11 18
Slovak Republic	02 59 68 22 66
Slovenia	0 14 74 63 36
South Africa	08 60 10 11 57
Spain	9 02 11 50 61
Sweden	0 87 50 99 11
Switzerland	08 48 21 20 00
Taiwan	02 23 96 10 06
Thailand	0 22 68 11 18
Tunisia	71 86 19 02
Turkey	0 21 65 79 71 00
Ukraine	8 80 05 01 00 00
United Arab Emirates	0 43 31 95 78
United Kingdom	0 87 05 33 44 11
USA	1 88 87 77 02 11
Vietnam	45 63 22 44
Zimbabwe	04 36 94 24

Note

When calling customer service, please have ready your receipt, the phone identity number (IMEI, to display press *#06#), the software version (to display press *#06#, then **Info**) and, if applicable, your Siemens Service customer number.

Your phone has been designed and crafted with great care and attention and should also be treated with care. The suggestions below will help you to enjoy your phone for many years.

- Protect your phone from moisture and humidity! Precipitation, humidity and liquids contain minerals that will corrode electronic circuits. Nevertheless, should your phone become wet, disconnect it immediately from the power supply and remove the battery!
- Do not use or store the phone in dusty, dirty areas. Its moving parts may become damaged.
- Do not store the phone in hot areas. High temperatures can shorten the life of electronic devices, damage batteries and warp or melt certain plastics.
- Do not store your phone in cold areas. When the phone warms up again (to its normal ambient temperature), moisture can form inside the phone, which may damage electronic circuit boards.
- Do not drop, knock or shake your phone. Rough handling can damage internal circuit boards!
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the phone!

The suggestions given above apply equally to your phone, battery, charger and all accessories. If any of these parts are not working properly, take them to your nearest qualified service outlet. The personnel there will assist you and, if necessary, repair the device.

Declaration of conformity

Siemens Information and Communication mobile hereby declares that the phone described in this user guide is in compliance with the essential requirements and other relevant provisions of European Directive 1999/5/EC (R&TTE).

The declaration of conformity (DoC) concerned has been signed. Please call the company hotline if you require a copy of the original.

CE 0168

Technical data

GSM class	4 (2 Watt)
Frequency range:	880-960 MHz
GSM class:	1 (1 Watt)
Frequency range:	1,710-1,880 MHz
Weight:	80 g
Dimensions:	100.7x43.9x20.8 mm (69 ccm)
Li-Ion battery:	700 mAh
Operating temperature:	-10 °C to 55 °C
Standby time:	60 h - 300 h
Talk time:	90 min - 360 min
SIM card:	3.0 V
SAR	0.49 W/kg*

* This applies to the phone together with the front and back covers and keyboard supplied with the phone.

Maintenance tips

- The SIM card should be treated with the same care as a cheque guarantee card. Do not bend or scratch it or expose it to static electricity.
- Clean the card with a damp cloth or an antistatic wipe without chemical cleaning agents.
- Protect the phone from moisture and shocks. Do not expose your phone to direct sunlight.
- Remove the battery if you are not going to use the phone for extended periods of time (more than one month).

Phone ID

You will need the following details if you lose your phone or SIM card. Please enter here

the number of the SIM card (on the card):

15-digit serial number of the phone (under the battery):

Customer Service number of the service provider:

Lost phone

If you lose your phone or SIM card contact your service provider immediately to prevent misuse.

Basics

Li-Ion Battery (700 mAh)

L36880-N5601-A100

Spare battery.

Travel Charger

L36880-N5601-A104 (Euro)

L36880-N5601-A105 (UK)

Travel charger with an extended input voltage rate of 100-240V.

Desk Top Charger

L36880-N5601-A101

The desktop charger enables convenient charging of the mobile phone and an additional battery.

Headset PTT

L36880-N5601-A108

Headset with PTT key for activating the voice recognition and accepting and ending calls.

Carry Set

L36880-N5601-A119

Features a belt clip and a retaining clip for discretely fastening the mobile phone to clothes or in bags.

CLIPit™ Covers

Exchangeable top and bottom covers can be obtained in specialist shops. Visit our online shop.

Carrying Cases

Several carrier bags can be obtained in specialist shops. Visit our online shop under:



Original Siemens Accessories

[www.siemens.com/
mobilestore](http://www.siemens.com/mobilestore)

Data/Applications

Data Cable RS232

L36880-N5601-A110

To connect the mobile phone to the serial RS232 port of the PC.

Data Cable USB

L36880-N5601-A111

To connect the mobile phone to the USB port of your PC. With load function.

Sync Pack

L36880-N5601-A103

Table cradle for your mobile phone. Allows data exchange and simultaneously charges the phone on the power supply unit at home. Features a Desktop Stand, a Data Cable RS232 and a Y adapter.

Car Solutions

Car Charger

L36880-N5601-A106

Charger for the cigarette lighter socket in your car. Car Kit Portable

L36880-N5601-A109

Handsfree kit with integrated loudspeaker and microphone and auto answer feature. Simply plug into the cigarette lighter socket. Ideal for mobility between vehicles.

Mobile Holder

L36880-N5601-A116

Cradle without antenna port.

Mobile Holder Antenna

L36880-N5601-A117

Mobile holder for connecting an outdoor antenna. Ideal in combination with Headset PTT or Car Kit Portable.

Basic Car Pack

L36880-N5601-A118

Allows handsfree talking and simultaneously charges the mobile phone in the car. Features a Car Charger, a Headset PTT and a Y adapter.

Car Kit Comfort

L36880-N5701-A100

Handsfree kit with first-class digital call quality and utmost ease of use. Includes all components needed for installation. The individual antenna solution can be obtained from your specialist dealer.

Car Kit Professional Voice II

L36880-N5701-A101 (German)

L36880-N5701-A102 (English)

L36880-N5701-A103 (French)

Handsfree kit with voice recognition, capacity for more than 150 names. Electronics box with connection for fax and email transmission via your notebook. Includes all components needed for installation. The individual antenna solution can be obtained from your specialist dealer.

Car Kit Upgrade for Car Kit Comfort and Car Kit Voice I

L36880-N5701-A104

Cradle for upgrading your Car Kit Comfort and Car Kit Voice I handsfree kit.

Car Kit Upgrade for Car Kit Voice II

L36880-N5701-A105

Cradle for upgrading your Car Kit Voice II handsfree kit.

Optional Car Kit accessories

Car Handset L36880-N3015-A123

VDA Adapter Cable.. L36880-N4001-A121

Car Data Adapter..... L36880-N5701-A108

Push To Talk Key.....L36880-N4501-A135

Products can be obtained in specialist shops. Visit our online shop under:



Original Siemens Accessories

[www.siemens.com/
mobilestore](http://www.siemens.com/mobilestore)

Without prejudice to any claim the user (customer) may have in relation to the dealer or retailer, the customer shall be granted a manufacturer's Guarantee under the conditions set out below:

- In the case of new devices and their components exhibiting defects resulting from manufacturing and/or material faults within 24 months of purchase, Siemens shall, at its own option and free of charge, either replace the device with another device reflecting the current state of the art, or repair the said device. In respect of parts subject to wear and tear (including but not limited to, batteries, keypads, casing), this warranty shall be valid for six months from the date of purchase.
- This Guarantee shall be invalid if the device defect is attributable to improper treatment and/or failure to comply with information contained in the user manuals.
- This Guarantee shall not apply to or extend to services performed by the authorised dealer or the customer themselves (e.g. installation, configuration, software downloads). User manuals and any software supplied on a separate data medium shall be excluded from the Guarantee.
- The purchase receipt, together with the date of purchase, shall be required as evidence for invoking the Guarantee. Claims under the Guarantee must be submitted within two months of the Guarantee default becoming evident.
- Ownership of devices or components replaced by and returned to Siemens shall vest in Siemens.
- This Guarantee shall apply to new devices purchased in the European Union. For Products sold in the United Kingdom the Guarantee is issued by Siemens plc, Siemens House, Oldbury, Bracknell, Berkshire, RG12 8FZ.
- Any other claims resulting out of or in connection with the device shall be excluded from this Guarantee. Nothing in this Guarantee shall attempt to limit or exclude a Customers Statutory Rights, nor the manufacturer's liability for death or personal injury resulting from its negligence.
- The duration of the Guarantee shall not be extended by services rendered under the terms of the Guarantee.
- Insofar as no Guarantee default exists, Siemens reserves the right to charge the customer for replacement or repair.
- The above provisions does not imply a change in the burden of proof to the detriment of the customer.

To invoke this Guarantee, please contact the Siemens telephone service. The relevant number is to be found in the accompanying user guide.

Without prejudice to any claim the user (customer) may have in relation to the dealer or retailer, the customer shall be granted a manufacturer's Guarantee under the conditions set out below:

- In the case of new devices and their components exhibiting defects resulting from manufacturing and/or material faults within 24 months of purchase, Siemens shall, at its own option and free of charge, either replace the device with another device reflecting the current state of the art, or repair the said device. In respect of parts subject to wear and tear (including but not limited to, batteries, keypads, casing), this warranty shall be valid for six months from the date of purchase.
- This Guarantee shall be invalid if the device defect is attributable to improper care or use and/or failure to comply with information contained in the user manuals. In particular claims under the Guarantee cannot be made if:
 - The device is opened (this is classed as third party intervention)
 - Repairs or other work done by persons not authorised by Siemens.
 - Components on the printed circuit board are manipulated
 - The software is manipulated
 - Defects or damage caused by dropping, breaking, lightning or ingress of moisture. This also applies if defects or damage was caused by mechanical, chemical, radio interference or thermal factors (e.g.: micro-wave, sauna etc.)
 - Devices fitted with accessories not authorised by Siemens
- This Guarantee shall not apply to or extend to services performed by the authorised dealer or the customer themselves (e.g. installation, configuration, software downloads). User manuals and any software supplied on a separate data medium shall be excluded from the Guarantee.
- The purchase receipt, together with the date of purchase, shall be required as evidence for invoking the Guarantee. Claims under the Guarantee must be submitted within two months of the Guarantee default becoming evident.
- Ownership of devices or components replaced by and returned to Siemens shall vest in Siemens.
- This Guarantee shall apply to new devices purchased in the European Union. For Products sold in the Republic of Ireland the Guarantee is issued by Siemens Ireland Limited, Ballymoss Road, Sandyford Industrial Estate, Dublin 18 - The Republic of Ireland.

- Any other claims resulting out of or in connection with the device shall be excluded from this Guarantee. Nothing in this Guarantee shall attempt to limit or exclude a Customers Statutory Rights, nor the manufacturer's liability for death or personal injury resulting from its negligence.
- The duration of the Guarantee shall not be extended by services rendered under the terms of the Guarantee.
- Insofar as no Guarantee default exists, Siemens reserves the right to charge the customer for replacement or repair.
- The above provisions does not imply a change in the burden of proof to the detriment of the customer.

To invoke this Guarantee, please contact the Siemens helpdesk on 1850 777 277. This number is also to be found in the accompanying user guide.

INFORMATION ON RF EXPOSURE / SPECIFIC ABSORPTION RATE (SAR)

THIS MOBILE PHONE MEETS THE LIMITS SET BY THE EU (1999/519/EC) FOR PROTECTION OF THE HEALTH OF THE PUBLIC FROM THE EFFECTS OF EXPOSURE TO ELECTROMAGNETIC FIELDS

These limits are part of comprehensive recommendations for the protection of the public. The recommendations were developed and confirmed by independent scientific organisations through periodic and thorough evaluation of scientific studies*. The limits include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

Before a radio equipment may be placed on the market, compliance with the European laws and the respective technical limit requirements must be demonstrated. Only then the CE mark may be affixed**. The limit for mobile phones recommended by the Council of the European Union employs a unit of measurement known as the Specific Absorption Rate, or SAR. This SAR limit is 2.0 W/kg***. This corresponds with the requirements of the International Commission for Non-Ionizing Radiation Protection ICNIRP and was adopted into the European Norm for Mobile Radio Equipment EN 50360. The SAR of mobile phones is determined in accordance

with the European Norm EN 50361. This involves measuring the maximum value in all frequency bands of the mobile phone with the phone transmitting at its highest power level. The actual SAR level of the phone during normal operation may be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a base station, the lower the power output.

The highest SAR value for this model phone when tested for compliance against the norm is

0,49 W/kg****.

The SAR information can also be found on the Siemens web site at www.my-siemens.com. While there may be differences between the SAR levels of various phones and at various positions, all Siemens products meet the legal requirements.

* The World Health Organization (WHO, CH-1211 Geneva 27, Switzerland) states that present scientific information does not indicate the need for any special precautions for use of mobile phones.

Further information: www.who.int/peh-emf, www.mmfai.org, www.my-siemens.com.

** The CE mark confirms that the product is in compliance with the legal requirements of the European Union as a prerequisite for the placing on the market and the free movement of goods within the European internal market.

*** averaged over 10g body tissue.

**** SAR values may vary depending on national requirements and frequency bands. SAR information for different regions can be found at www.my-siemens.com.

INFORMATION ON RF EXPOSURE / SPECIFIC ABSORPTION RATE (SAR)

THIS MOBILE PHONE MEETS THE LIMITS FOR PROTECTION OF THE HEALTH OF THE PUBLIC FROM THE EFFECTS OF EXPOSURE TO ELECTROMAGNETIC FIELDS

Your mobile phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the limits for exposure to radio frequency (RF) energy recommended by international guidelines from the International Commission on Non-ionizing Radiation Protection (ICNIRP). These limits are part of comprehensive guidelines for the protection of the public and establish permitted levels of RF energy for the population. The guidelines were confirmed by independent scientific organisations through periodic and thorough evaluation of scientific studies*. The limits include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure limit for mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit stated in the international guidelines is 2.0 W/kg**. Tests for SAR are conducted in all frequency bands using standard operating positions with the phone transmitting at its highest power level. The actual SAR level of the phone during operation can be well be-

low the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a base station, the lower the power output.

The highest SAR value for this model phone when tested for use at the ear is

0.49 W/kg***.

SAR information can also be found at www.my-siemens.com. While there may be differences between the SAR levels of various phones and at various positions, they all meet the international guidelines for safe RF exposure.

* The World Health Organization (WHO, CH-1211 Geneva 27, Switzerland) states that present scientific information does not indicate the need for any special precautions for use of mobile phones.



Further information: www.who.int/peh-emf, www.mmfa.org, www.my-siemens.com.

** averaged over 10g of tissue.

*** SAR values may vary depending on national requirements and frequency bands. Information for different regions can be found at www.my-siemens.com.

A	
Accepted calls, call list.....	29
Accessories	96
Account limit	30
Activate	
HTTP profile	42
phone profile.....	55
Aircraft mode, profile	56
Alarm	
alarm clock	47
anniversaries	49
appointments.....	49
Alarm clock	47
Alarm tones	63
All calls, divert	64
All calls, duration/charges.....	30
All incoming, network barring	73
Anniversary.....	48
Answering service (external).....	53
Any key to answer.....	63
Application	
download.....	40
start	40
Appointments.....	47
Archive, SMS.....	33
Audio	61
Auto display	
call duration/charges.....	30
CB.....	54
clock	67
Auto redial previous numbers	16
Auto timezone.....	66
Auto Zeitzone	66
B	
Babysitter	20
Band selection	75
Battery	
charge	8
insert	7
operating times	83
quality declaration	80
Big letters.....	61
Bitmap style.....	60
Bitmap viewer	42
Bookmarks, WAP	37
Bottom cover, my-CLIPit™	14
Browser, WAP	38
Busy number	16
C	
Calculator functions	51
Call	
accept/end.....	16
barrings.....	73
charges	30
conference	19
divert.....	64
end	15
held	17
menu.....	19
reject.....	17
several simultaneously	18
swap (toggling)	18
to group.....	26
Call back.....	16
Call divert.....	64
Call transfer	19
Call transfer (incoming call)	19, 27
Call waiting.....	18
Car accessories.....	97
Car Kit.....	76, 97
Care of phone	94
Cell Broadcast (CB)	54
Charge battery	8
Charge settings.....	30
Charges.....	30
Charges/units	30
CLIPit™ Cover	14
Clock.....	66

-
- Conference 19
 - Contrast, display 61
 - Control codes (DTMF)..... 80
 - Covers, my-CLIPit™ 14
 - CSD 80
 - D**
 - Date format 66
 - Dialled numbers, call list 29
 - Dialling with number keys 15
 - Display 60
 - big letters..... 61
 - contrast..... 61
 - illumination 61
 - symbols 79
 - Divert 64
 - DTMF tones (control codes) 80
 - Duration/charges..... 30
 - E**
 - Emergency number 80
 - EMS 35, 81
 - Extras 94
 - F**
 - Factory settings 66
 - Fast access 58
 - Fast search 75
 - Favourites 57
 - Filter for calls 63
 - Frequency range 75
 - G**
 - Games & More 40
 - Games, download 40
 - Getting Started 6
 - GPRS 81
 - activate/deactivate 67
 - Greetings..... 48
 - Group
 - call to group 26
 - setup 28
 - SMS to group 26
 - Guarantee certificate 98
 - H**
 - Handsfree function..... 17
 - Headset..... 76, 96
 - Headset volume..... 15
 - Held call 17
 - Hide ID 64
 - Home network 74
 - Hotline Siemens..... 92
 - HTTP 82
 - HTTP profiles 69
 - I**
 - Illumination, display..... 61
 - IMEI number..... 66
 - Inbox, SMS..... 32
 - Input language, T9 77
 - International dialling codes..... 82
 - J**
 - JAD file 82
 - JAR file..... 82
 - Java..... 83
 - K**
 - Key lock..... 63
 - Key tones 63
 - Keys 63
 - Kundenservice Siemens 92
 - L**
 - Letter writing 22
 - Limit, duration/charges..... 30
 - Line selection, connection 74
 - Logo (provider logo) 42, 60
 - Lost phone, SIM card..... 95
 - M**
 - Mailbox 53

-
- Maintenance of phone 94
 - Maintenance tips 95
 - Menu
 - control 9
 - my menu 57
 - Message (SMS) 31
 - Message store 83
 - Microphone on/off 19
 - Minute beep 63
 - Missed alarms 50
 - Missed calls, call list 29
 - Muting, microphone 19
 - My menu 57
 - My phone 14
 - my-CLIPit™ 14
 - N**
 - Network
 - barrings 73
 - connection 74
 - setup 74
 - New appointment 47
 - New SMS 31
 - read 31
 - News (CB) 54
 - Notes 49
 - Notes A-Z 80
 - O**
 - Only  72
 - Only  72
 - Only last ten 72
 - Only this SIM 72
 - Operating times of the battery 80
 - Organiser 48
 - Own (phone) numbers 83
 - Own greeting 60
 - P**
 - Phone barrings 72
 - Phone code 12
 - Phone ID (IMEI) 66
 - Phone identity number (IMEI) 66
 - Phone memory 23
 - Phone number transfer on/off 64
 - Phonebook
 - assign animation 24
 - call an entry 22
 - new entry 21
 - store control code (DTMF) 80
 - text entry 22
 - Pictures
 - in SMS 31
 - receive/send 43
 - Pictures & Sounds (EMS) 35
 - PIN
 - change 12
 - control 12
 - enter 11
 - error 91
 - PIN 2 12
 - Prefix 15
 - Profiles 55
 - Java/HTTP 69
 - phone 55
 - SMS 70
 - WAP 68
 - Provider logo 42, 60
 - PUK, PUK2 12
 - Q**
 - Questions & Answers 89
 - Quick menu selection 84
 - R**
 - Record No., Phonebook 22
 - Recording (sound) 44, 45
 - Redial previous numbers 15
 - Reminder 16
 - Ring tones, melodies
 - assign 46

-
- load 44
 - Ringer setting 61
 - S**
 - Safety precautions 3
 - Screensaver 42, 60
 - Second call 18
 - Second phone number 74
 - Security 12, 72
 - Security codes 12
 - Service centre, provider 71
 - Service tones 63
 - Servicrufnummern Siemens 92
 - Setup
 - audio 61
 - clock 66
 - data exchange 67
 - display 60
 - divert 64
 - group 28
 - keys 63
 - phone 63
 - security 72
 - Short message (SMS) 31
 - Siemens City Portal 14
 - Signal strength 84
 - Silent alert 62
 - SIM card
 - clear barring 13
 - insert 6
 - problems 85, 89
 - SIM services 85
 - SMS**
 - archive 33
 - delete 32
 - Inbox/Outbox 32
 - insert pictures and sounds 35
 - read 31
 - set profiles 70
 - status report 71
 - text entry with T9 77
 - to group 26
 - write 33
 - Software version 85
 - SOS 80
 - Sound Manager 44
 - Sounds in SMS 31
 - Special characters 81
 - Speed dialling keys 59
 - Standby mode 11
 - Standby time 83
 - Start menu WAP 37
 - Status report, SMS 33
 - Storage location number 21, 22
 - Surf&Fun 37
 - Swap 18
 - Switch off phone
 - auto phone off 67
 - manually 11
 - Switch on phone 11
 - Symbols 79
 - T**
 - T9
 - activate/deactivate 77
 - word suggestions 78
 - Talk time (battery) 83
 - Technical data 95
 - Text entry 22
 - Text entry with T9 77
 - Text message (SMS) 31
 - Time zones 66
 - Time/Date setting 66
 - Top cover, my-CLIPit™ 14, 96
 - U**
 - Unanswered calls 64
 - Upper-, lowercase letters 22, 77
 - URL display, WAP 38
 - User group 75

V

Validity, SMS	70
Vibration	61
Voice command	50
Voice dialling	25
Voice message (mailbox)	53
Volume, handset	15
Volume, profiles	55
Volume, ringer	62

W**WAP**

browser	37
information	86
parameters	68